



Trainings ▾

Remove


Disconnect the solenoid power and ground wires from the terminals on the inside of the rocker lever housing spacer.

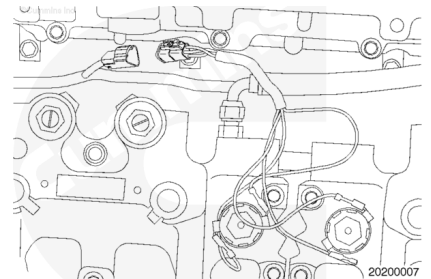


Disconnect the internal oil supply hose connection.

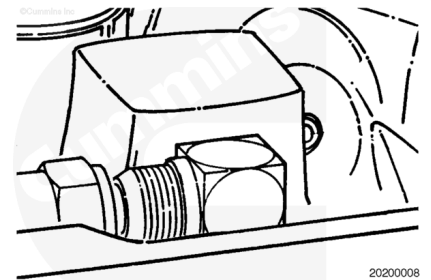


Disconnect the external oil supply hose connection.

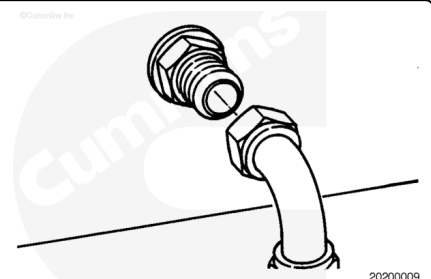

Press the connector into the front housing to allow clearance for housing removal.

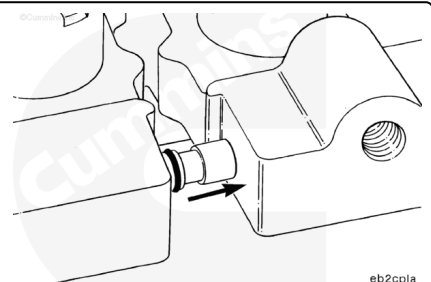

Remove the capscrews and both engine brake housings.

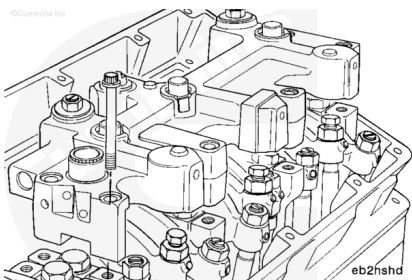

Last Modified: 15-Mar-2017
