

Trainings ▾

Cylinder Block


Tool Number

ST-647

Standard Puller

Used to remove alternator drive pulley. Used with two 5/16 x 18 x 2 inch capscrews.

©Cummins Inc

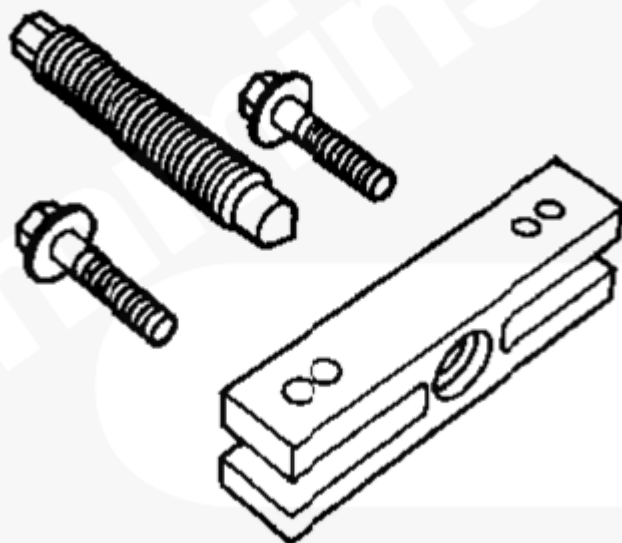

ad8toga


Tool Number

ST-821

Piston Ring Expander

Used to remove and install piston rings on pistons.

©Cummins Inc

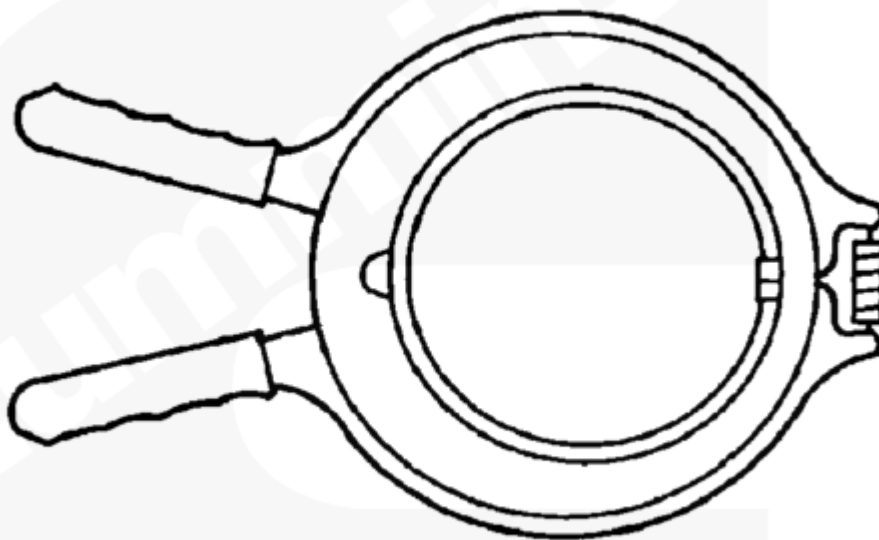

pi8togd


Tool Number

ST-1178

Main Bearing Cap Puller

Used to remove main bearing caps.

©Cummins Inc

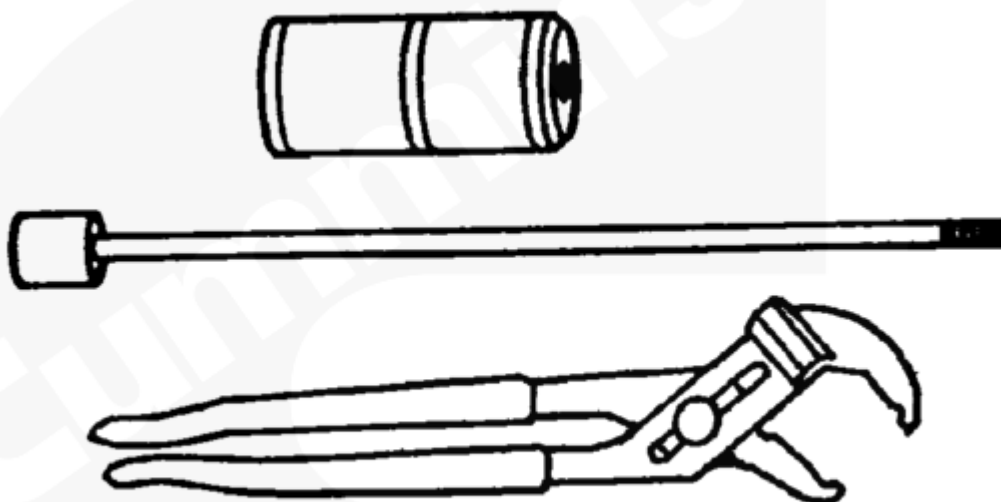

mb8toga


Tool Number

ST-1293

Belt Tension Gauge

Measure drive V-ribbed belt tension.

©Cummins Inc

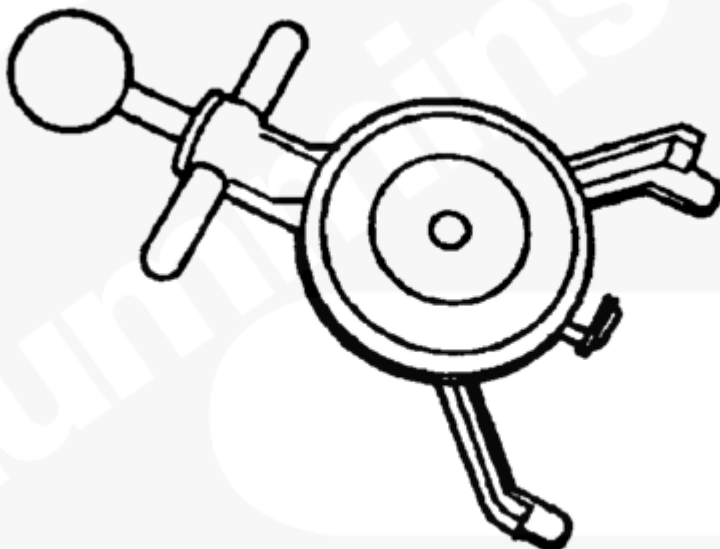

fa8togc


Tool Number

3162873

Universal Cylinder Liner Puller

Used to remove cylinder liners from cylinder block. Requires cylinder liner puller plate, Part Number 3376049.

©Cummins Inc

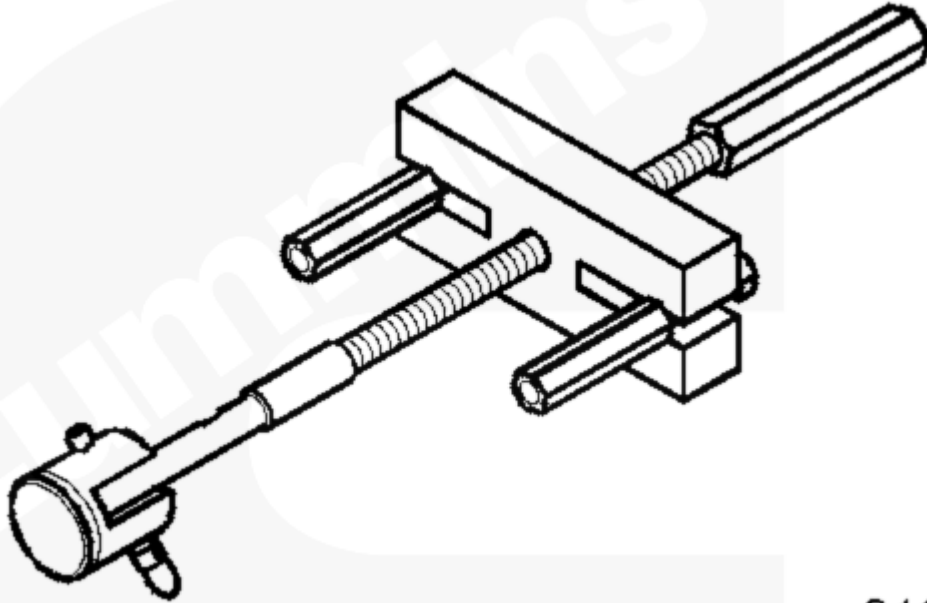

3162873


Tool Number

3376637 and 3376636

Slide Hammer Kit/Mandrel Kit

Used to install and remove camshaft bushings. Includes slide hammer and extension shaft.
Used with camshaft bushing mandrel, Part Number 3373363.

©Cummins Inc

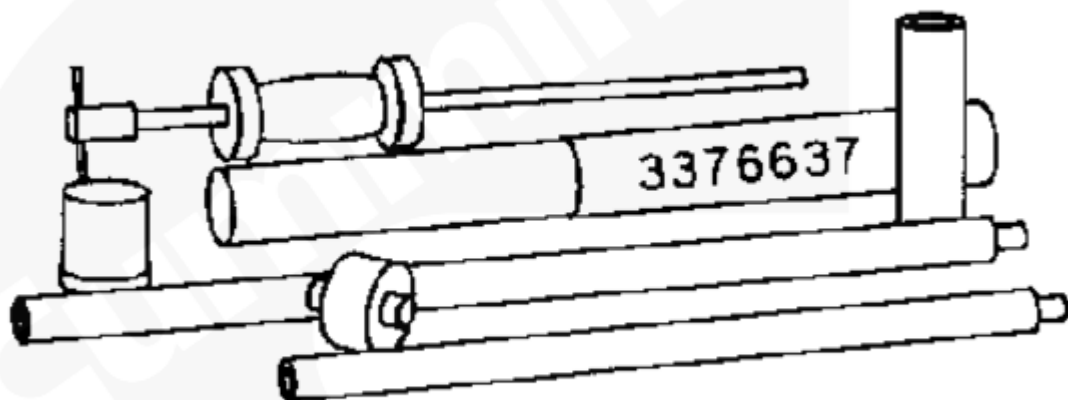

3376637


Tool Number

3375840

Crankshaft Gear Puller Kit

Used to remove the crankshaft gear. Requires puller, Part Number 3375834, and jaw, Part Number 3375839, to be used.

©Cummins Inc

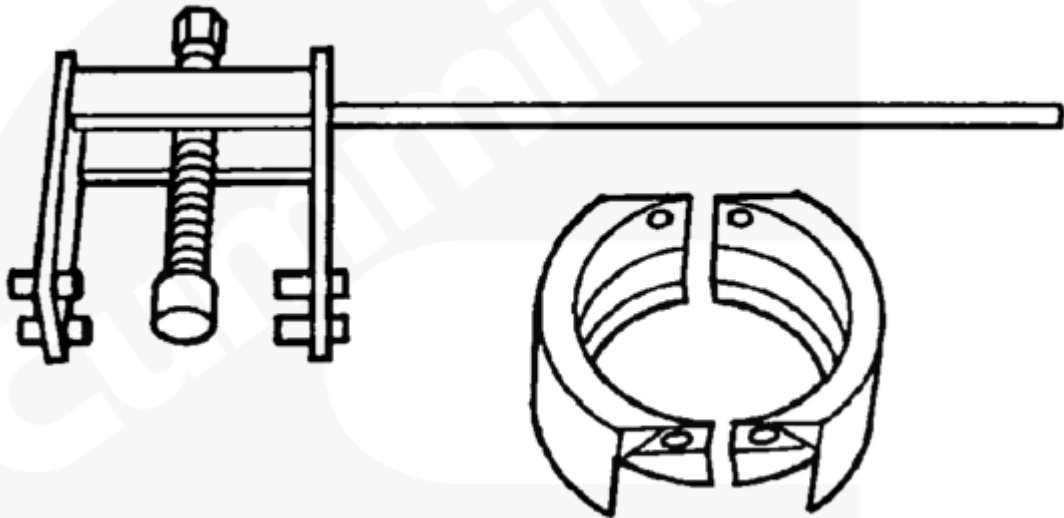

ks8togd


Tool Number

3376038

Connecting Rod Guide Pins

Guide connecting rods over crankshaft during removal or installation of connecting rods.

©Cummins Inc

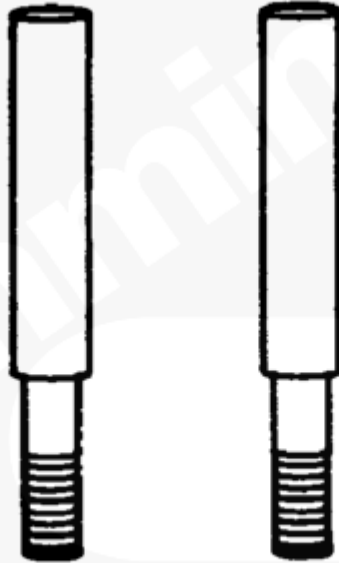

cx8togg


Tool Number

3376326

Pulley Installation Tool

Install drive pulleys. Use pulley pusher adapter, Part Number 3377401, to install the alternator drive pulley.

©Cummins Inc

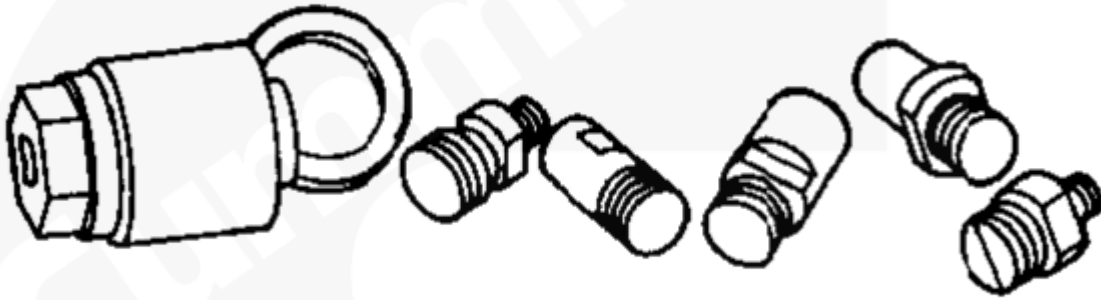

ad8togb


Tool Number

3376388

Camshaft Guide Pilot

Aid in removal and installation of the camshaft.

©Cummins Inc

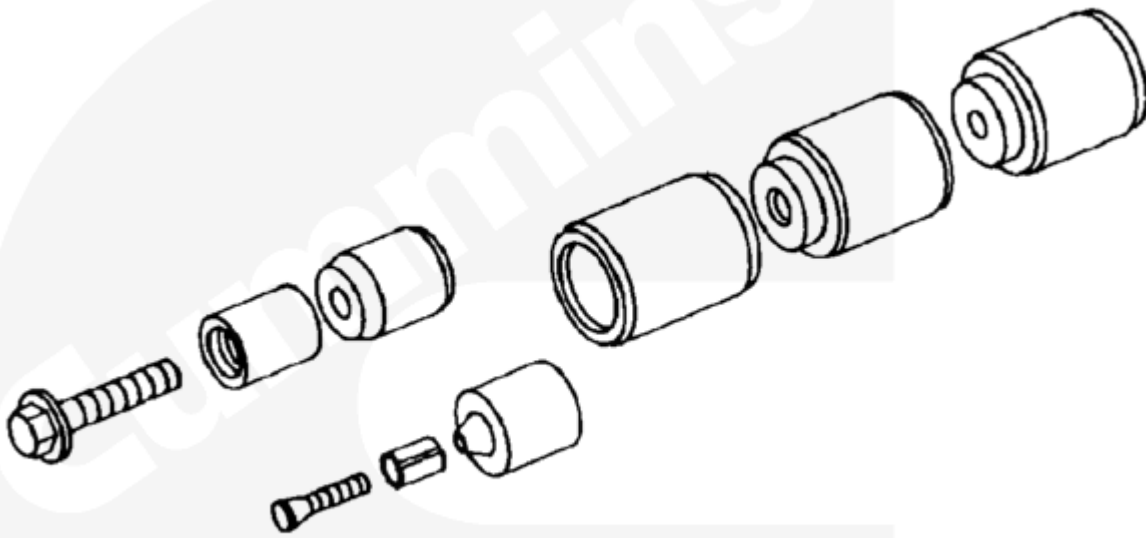

3376388


Tool Number

3376488

Guide Pin

Two guide pins are used to install the water header plate.

©Cummins Inc

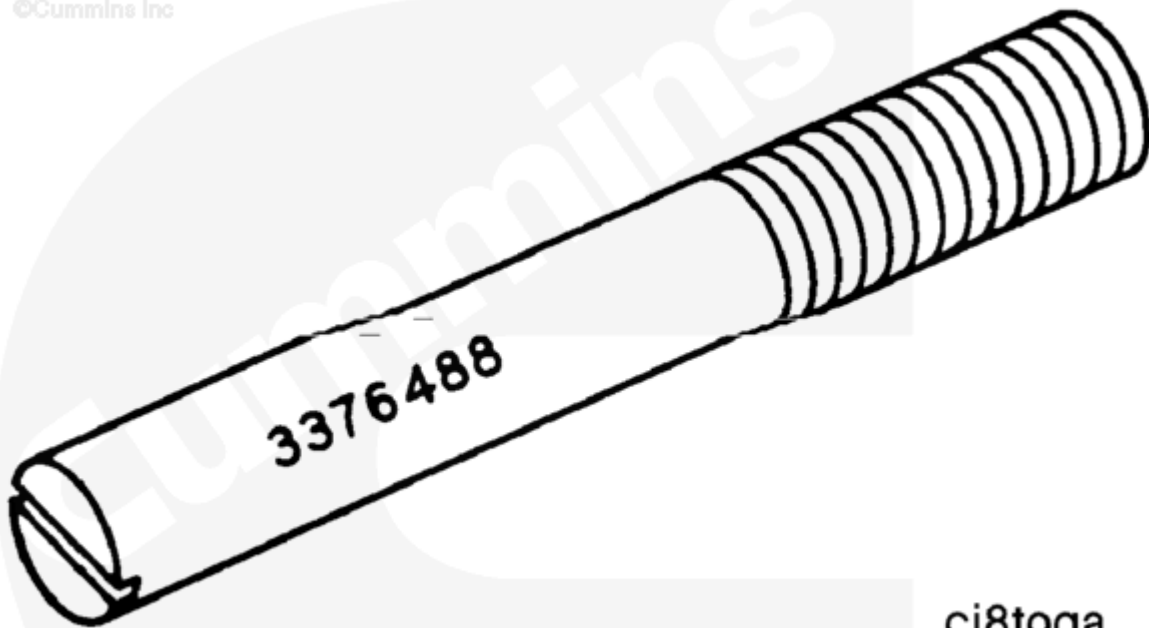

ci8toga


Tool Number

3823621

Hydraulic Actuator Kit

Used with installation/removal kit.

©Cummins Inc

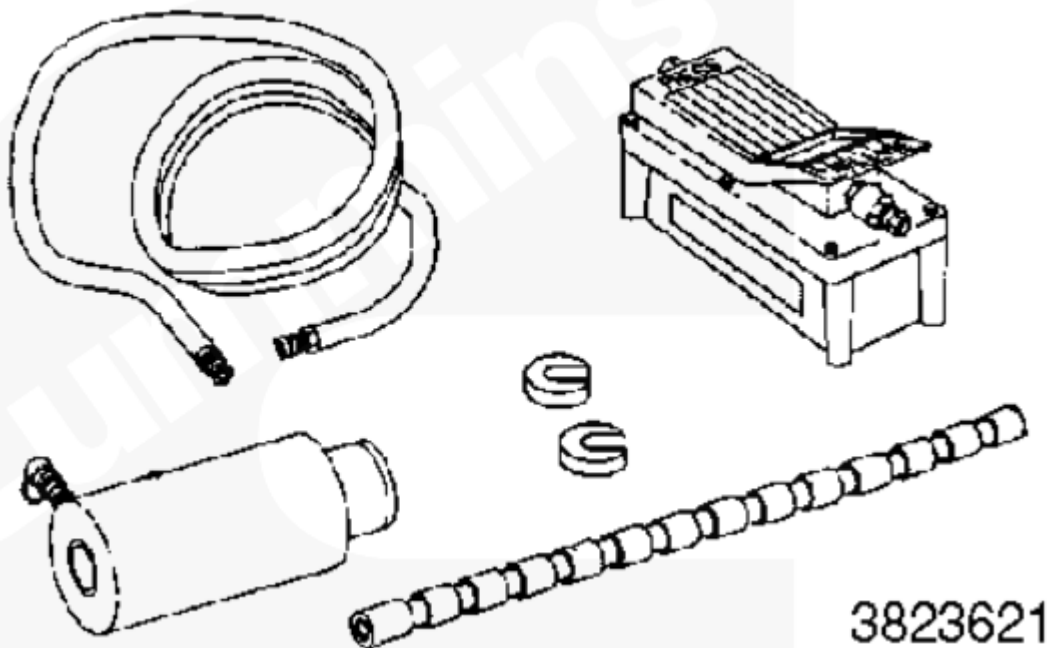


Tool Number

3823642

Installation/Removal Kit

Used to install/remove camshaft bushings.

©Cummins Inc

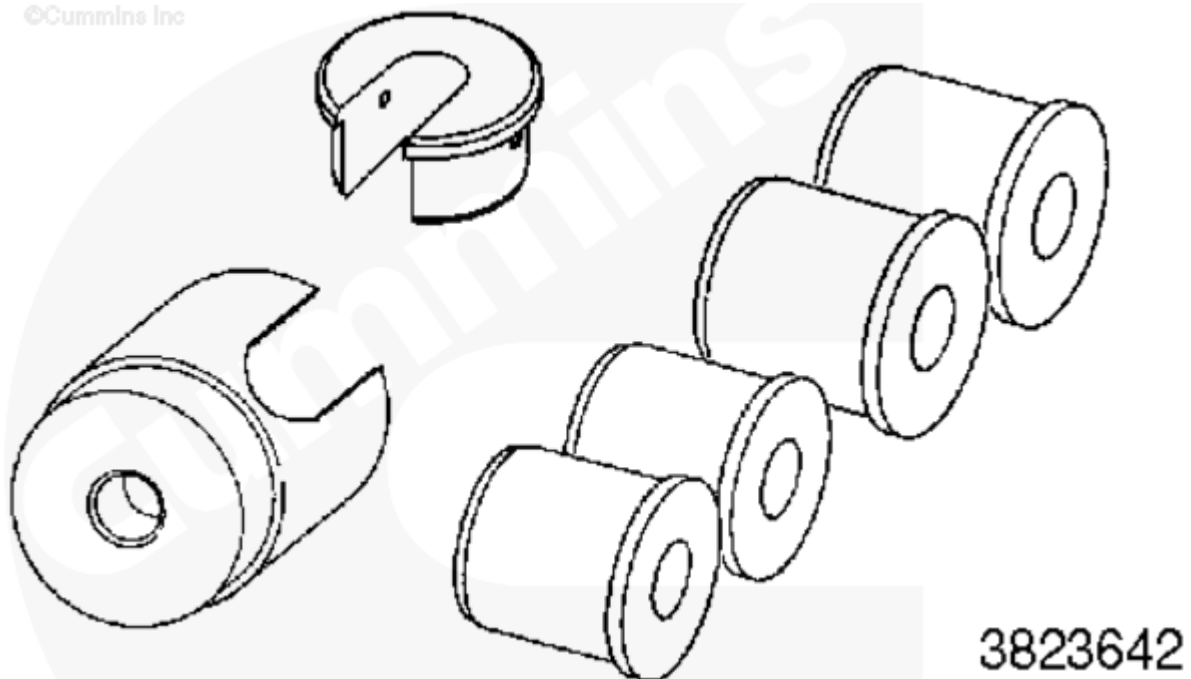


Tool Number

3376695

Guide Pin Kit

Aid during installation of vibration damper. The kit consists of two each guide pins, Part Numbers 3376488, 3376638, 3376696, 3376697, and 3376698.

©Cummins Inc

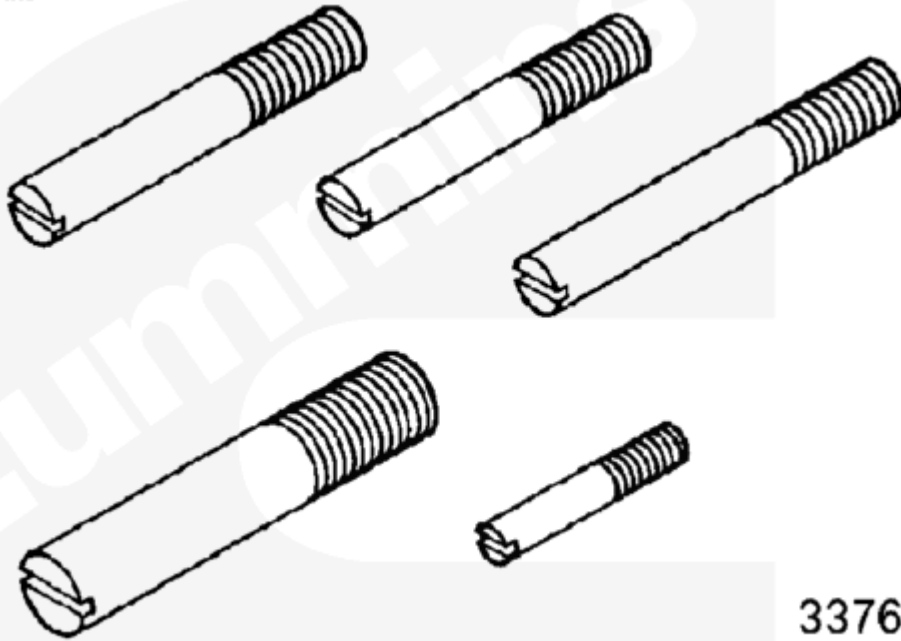**3376695**


Tool Number

3823309

Piston Ring Compressor

Compress piston rings on pistons during installation of pistons in the cylinder block.

©Cummins Inc

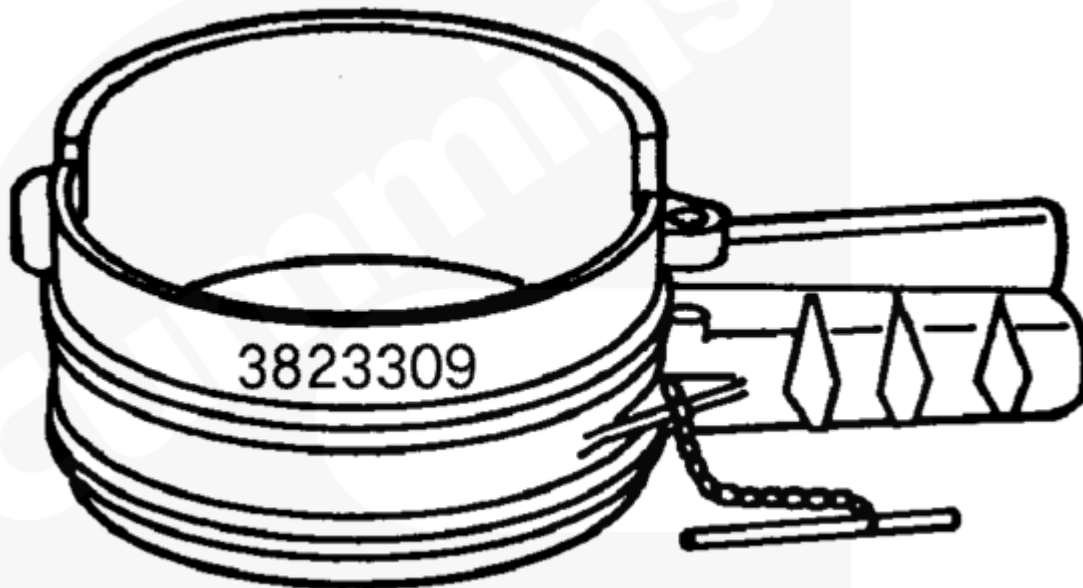


Tool Number

3823495

Gauge Block

Measure cylinder protrusion on the cylinder block and gear housing protrusion below the cylinder block.

©Cummins Inc

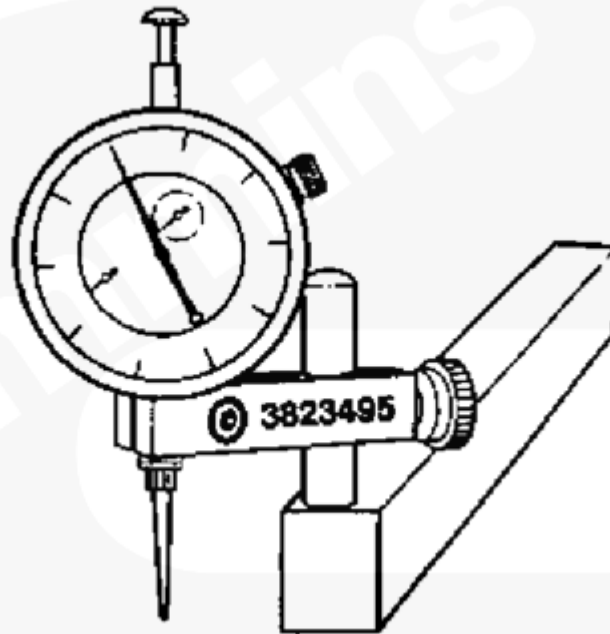**3823495**


Tool Number

3823774

Needle Bearing Kit

Used to remove and install needle bearings in the gear housing and hydraulic pump adapter.
Use mandrel, Part Number 3823776, to install hydraulic pump needle bearings.

©Gummine Inc

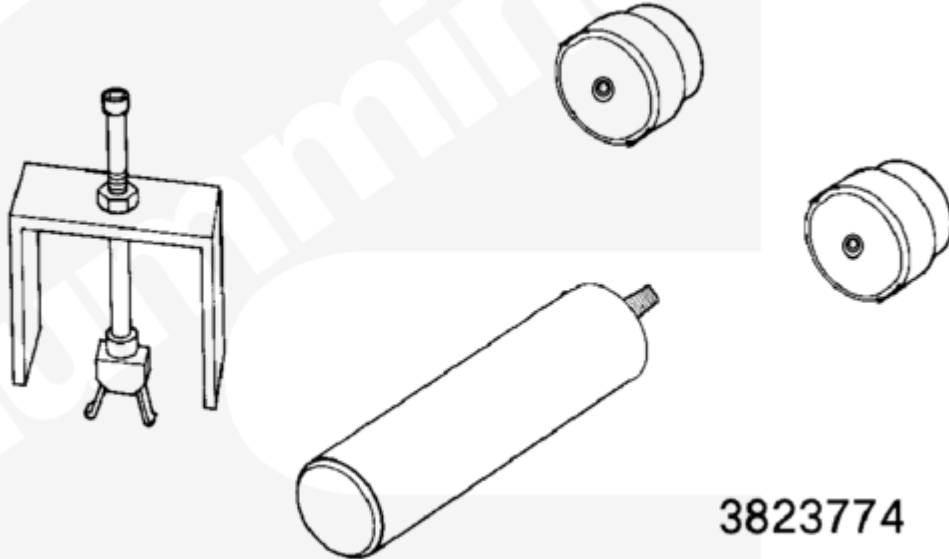


Tool Number

3162895

Cam Gear Puller Kit


Used to remove the camshaft gear from the camshaft without removing the camshaft from the engine.

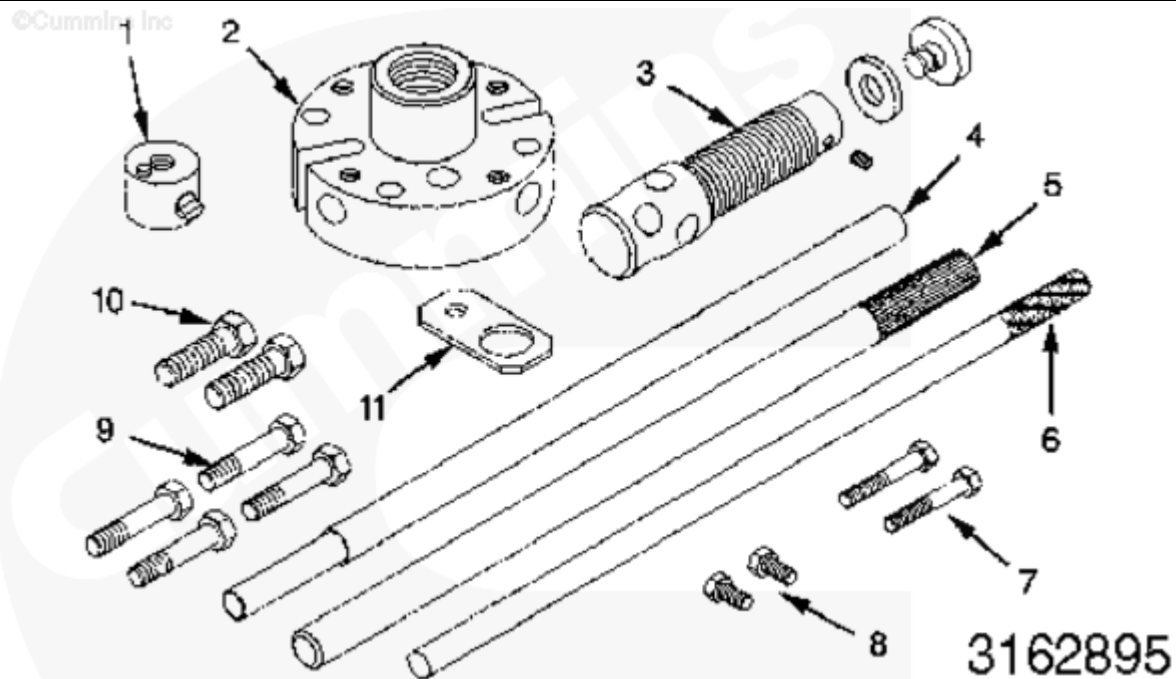**Tool Number**

3824117

Needle Bearing Installation Tool

Used to remove and install the water pump drive needle bearing in the gear housing.

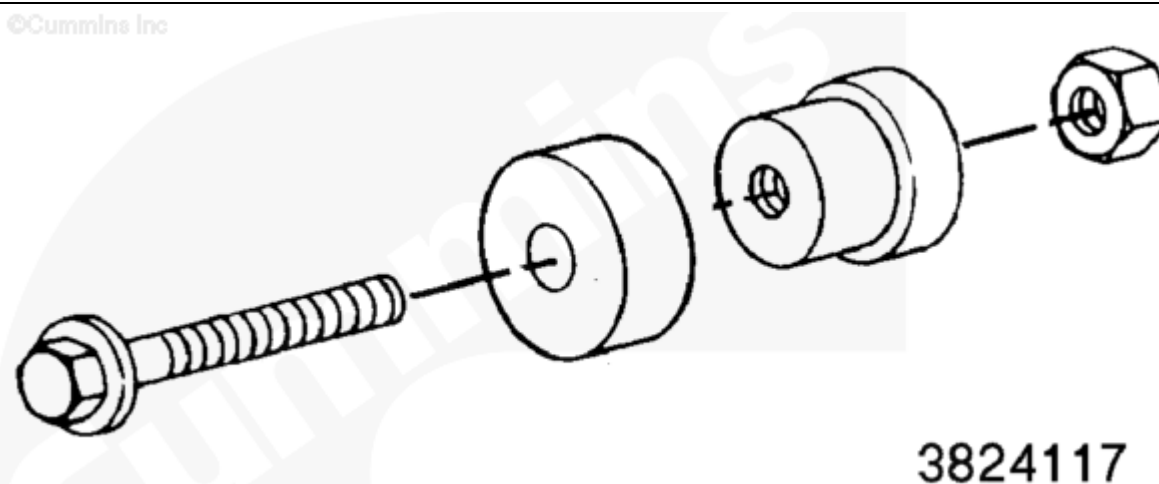


Tool Number

3824270

Engine Barring Tool

Used to bar the engine by hand.

©Cummins Inc

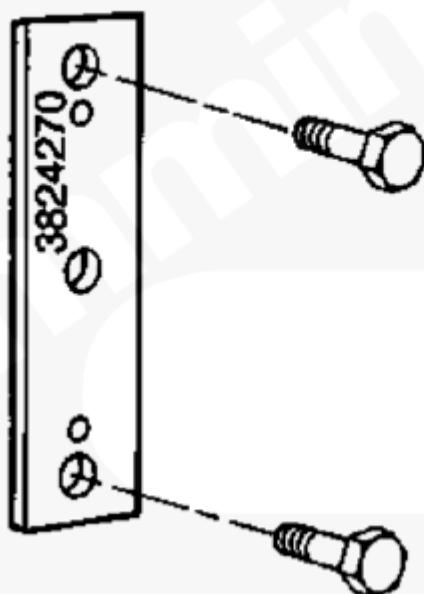
**3824270**

Tool Number

3824272

Liner/Installation Tool

Used to seat and hold the liner while liner protrusion is measured.

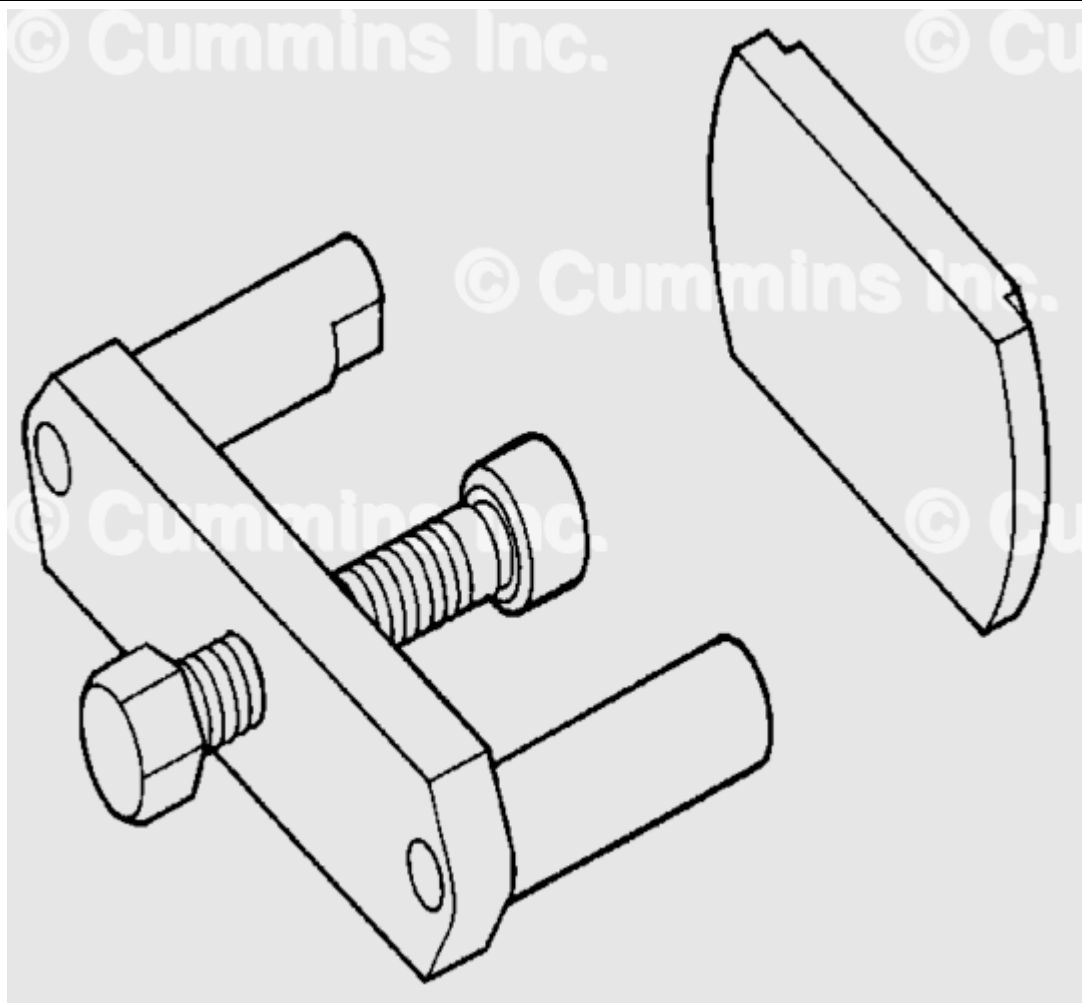

Tool Number

4918798

Crankshaft Seal Used to remover

Used to remove and install the front crankshaft oil seal.

