

Trainings ▾


Tool Number

ST-302

Ball Joint Vise

Use to hold the air compressor for disassembly or assembly.

©Cummins Inc

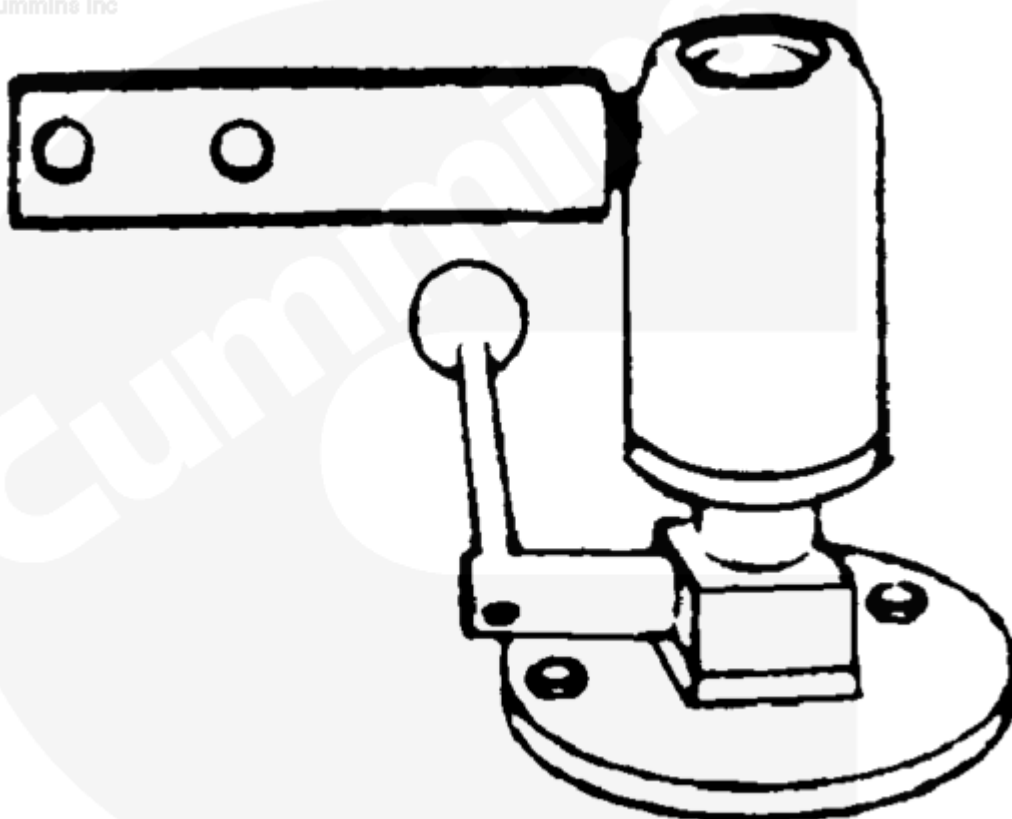


Tool Number

ST-749 or 3823597

Mounting Plate

Use to mount the air compressor to the vise.

©Cummins Inc

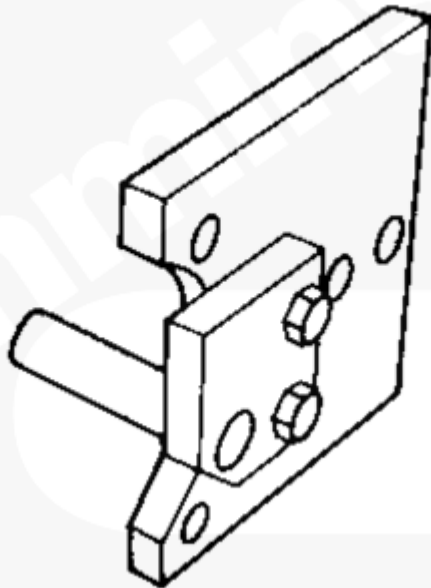

st-749

Tool Number

3375182

Valve Spring Tester

Use to check the exhaust valve, intake valve, and unloader valve cap springs.

©Cummins Inc



kn8togs


Tool Number

3376399

O-Ring Pick

Use to remove and install o-rings.

©Cummins Inc

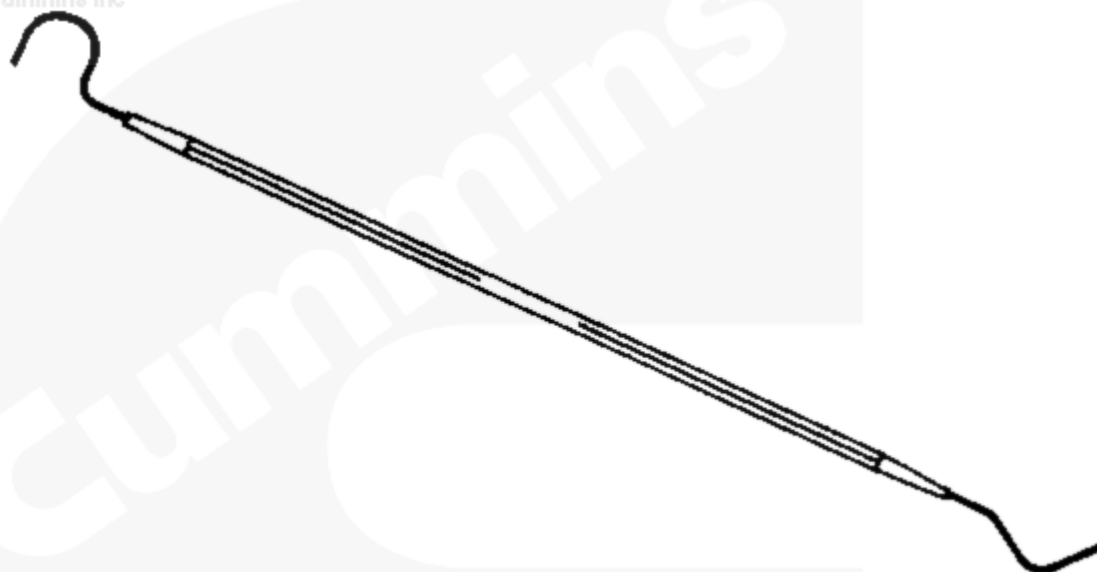

3376399


Tool Number

3376663

Coupling Puller

Use to remove the spline coupling hub.

©Cummins Inc

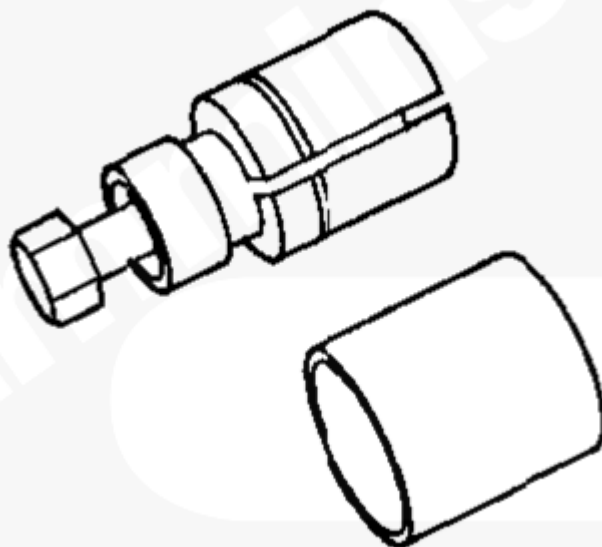


bp8togg

Tool Number

3377415

Air Compressor Seat Installation Tool

Use to install the exhaust valve seats.

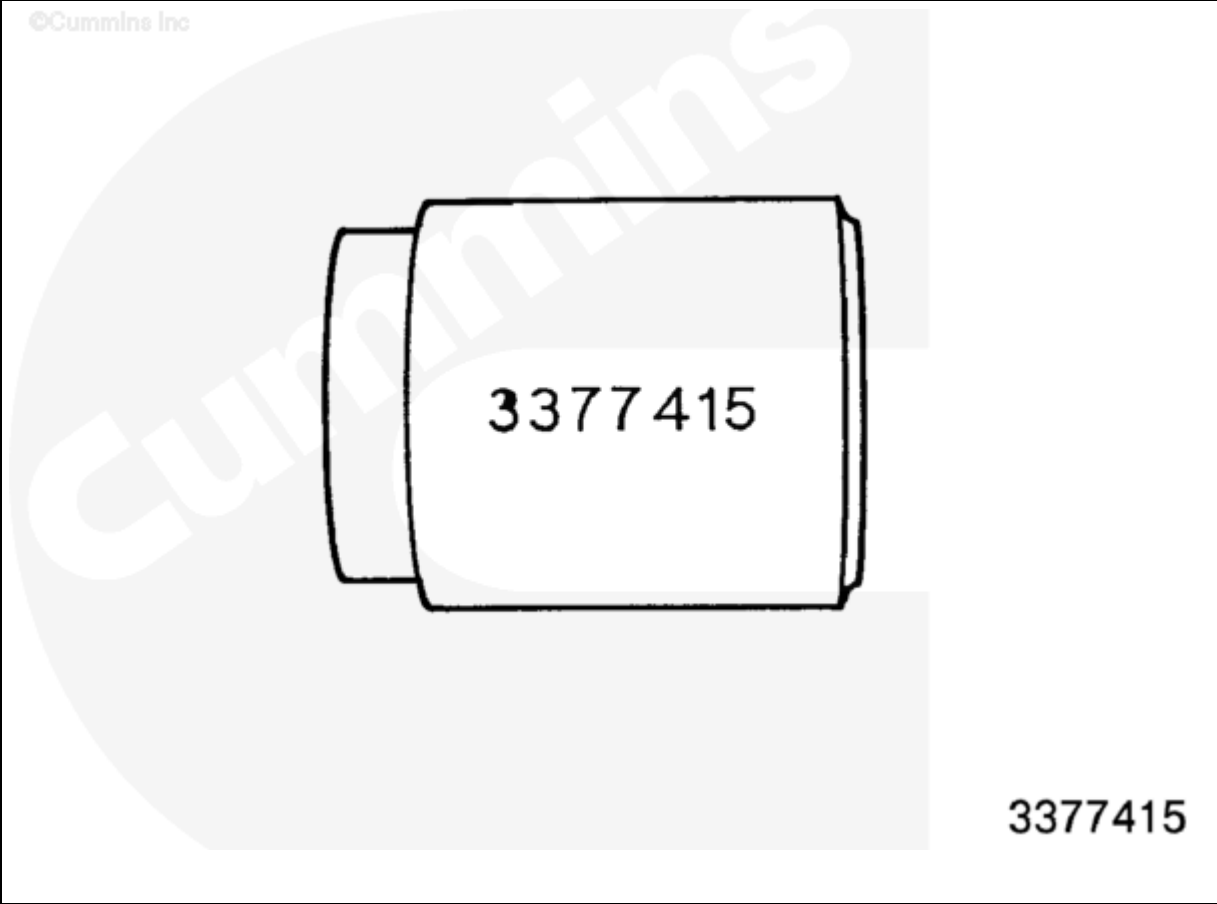


Tool Number

3377416

Air Compressor Seat Removal Tool

Use to remove the exhaust valve seats.

©Cummins Inc

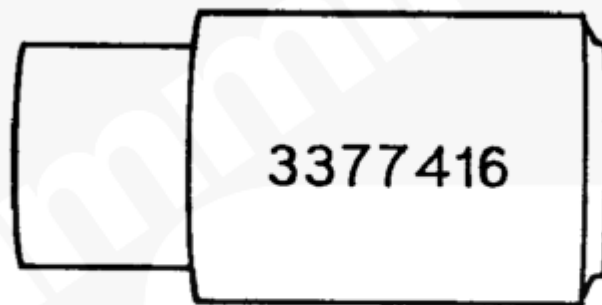

3377416


Tool Number

3823528

Air Compressor Seat Socket

Use to remove the exhaust valve seat and the inlet valve cage.

©Cummins Inc

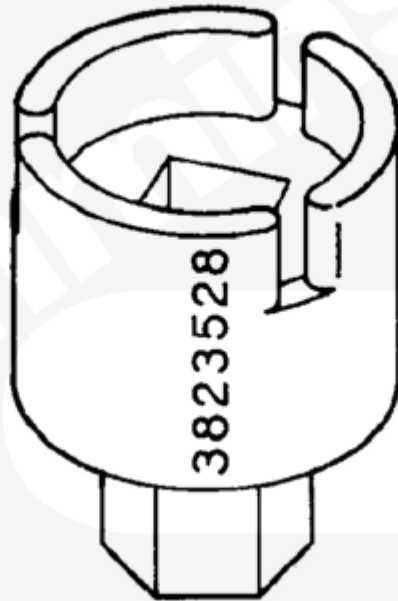**3823528**

Tool Number

3823923

Spacer

Use with coupling puller, Part Number 3376663, to remove the hydraulic pump drive coupling.

©Cummins Inc



3823923