

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- P80 Lubriplate™, Part Number 3163086, or equivalent.


Additional Service Items

- No additional service items required.

General Information

⚠ CAUTION ⚠

Do not loosen the mounting screws of the pre-separator, or remove the pre-separator from the rocker lever cover.

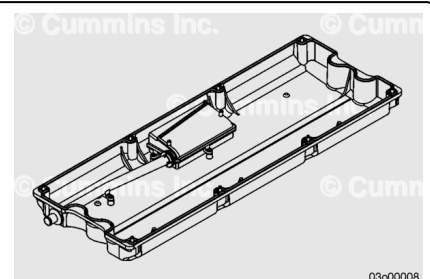

This engine uses a two piece breather inlet hose. The rocker lever cover contains a pre-separator for the crankcase breather assembly.

The pre-separator acts to help remove oil from crankcase gases before traveling to the crankcase breather filter.

This pre-separator, outlet tube, and seal are **not** serviceable and **must not** be removed from the rocker lever cover.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.
- Remove the exhaust gas recirculation (EGR) crossover tube. Refer to Procedure 011-070 in Section 11. (</qs3/pubsys2/xml/en/procedures/377/377-011-070-tr.html>)
- Disconnect the crankcase breather inlet hose. Refer to Procedure 003-001 in Section 3 (</qs3/pubsys2/xml/en/procedures/377/377-003-001.html>).

Remove

Completely loosen the capscrews.


Remove the rocker lever cover assembly.

The embedded cover gasket is reusable. Do **not** damage the cover gasket when removing the cover, or when setting the rocker lever cover assembly aside during repair.

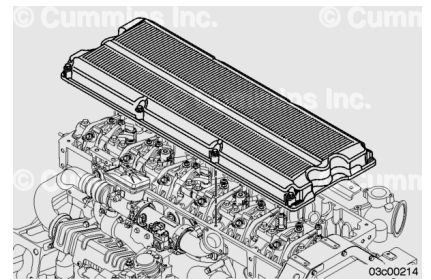

Clean and Inspect for Reuse

Clean the contaminated lubricating oil from the cylinder head cavities.

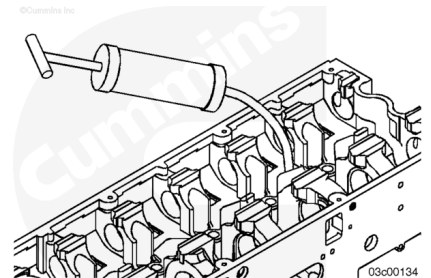


⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

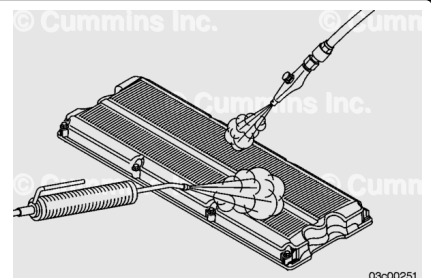


Steam clean the cover.

Dry with compressed air.

⚠ CAUTION ⚠


Do not use solvent to clean the rocker lever cover gasket. Solvent will damage the gasket material and cause it to swell. Prolonged exposure can also cause degradation of the gasket material.

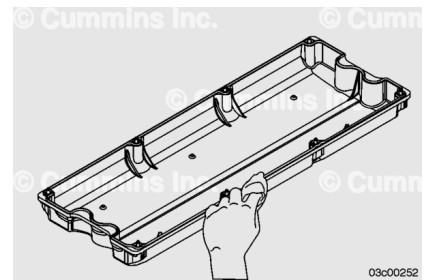

Leave the reusable gasket installed in the rocker lever cover and clean the gasket with a dry, lint-free cloth. Make sure no oil remains between the sealing beads.

Inspect the rocker lever cover for cracks or other damage.


Replace the cover, if necessary.

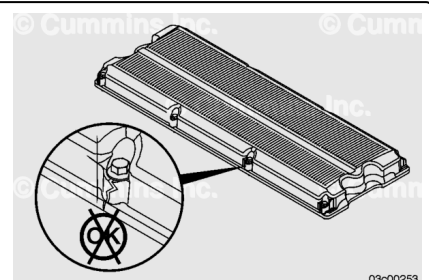

Inspect the reusable cover gasket beads for cuts, missing beads, kinks, twists, wear, and other damage.

A gouged hole is acceptable if the bead is **not** damaged.


Replace the gasket, if necessary.

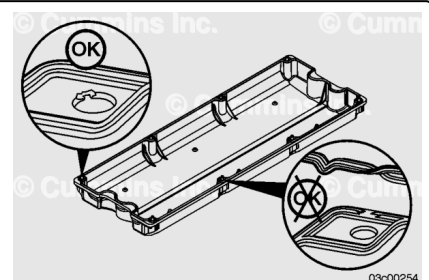

Install

Note : If the cover gasket was removed, install the cover gasket as soon as possible to avoid swelling of the cover gasket. The cover gasket swells due to its prior exposure to lubricating oil.

Note : If a new cover gasket is required, use P80 Lubriplate™, Part Number 3163086, or soapy water to lubricate the cover gasket.

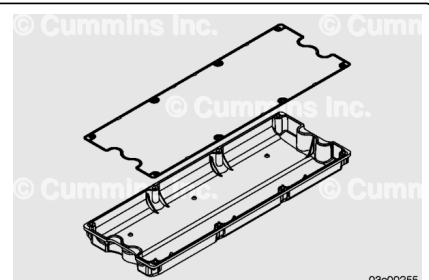

- If the cover gasket was removed, install the cover gasket as soon as possible to avoid swelling of the cover gasket. The cover gasket swells due to its prior exposure to lubricating oil.
- If a new cover gasket is required, use P80 Lubriplate™, Part Number 3163086, or soapy water to lubricate the cover gasket.

If the cover gasket was removed or requires replacement, start the installation of the cover gasket at each bolt hole and press the cover gasket into the groove in the rocker lever cover around each bolt hole.

After the cover gasket is in place around all bolt holes, press the cover gasket into the groove of the rocker lever cover, starting from the bolt holes and moving to the center of each span.

Inspect and make sure there are no kinks, twists, or other damage.


Align the capscrew holes in the cylinder head to the cover gasket and the rocker lever cover prior to installing the capscrews and isolator assemblies.

Install the capscrews.

Note : Rocker lever covers using only four capscrews with vibration isolators should have vibration isolators installed at the torque positions labeled 5, 6, 7, and 8.

Tighten the capscrews in the sequence shown.

Torque Value: 25 n•m [221 in-lb]

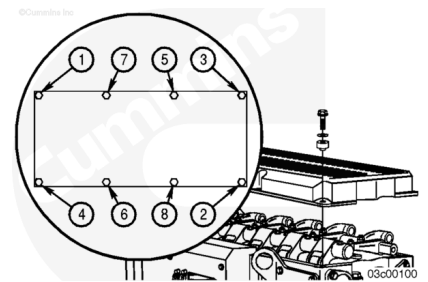

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the EGR crossover tube. Refer to Procedure 011-070 in Section 11. (</qs3/pubsys2/xml/en/procedures/377/377-011-070-tr.html>)

- Install the crankcase breather inlet hose. Refer to Procedure 003-001 in Section 3 (</qs3/pubsys2/xml/en/procedures/377/377-003-001.html>).
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine to normal operating temperature. Check for leaks and proper operation.

Last Modified: 01-Jun-2018
