

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Silicon sealant, Part Number 3164067, or equivalent

Additional Service Items

- No additional service items required.

Preparatory Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

WARNING


Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

- Disconnect the batteries. See equipment manufacturer service information.
- Drain the lubricating oil. Refer to Procedure 007-037 in Section 7.
(/qs3/pubsys2/xml/en/procedures/377/377-007-037.html)

Remove

Remove the oil pan mounting capscrews, oil pan, and gasket.


Discard the oil pan gasket.

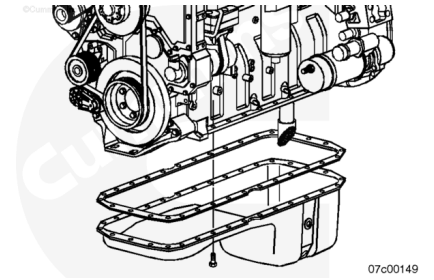

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

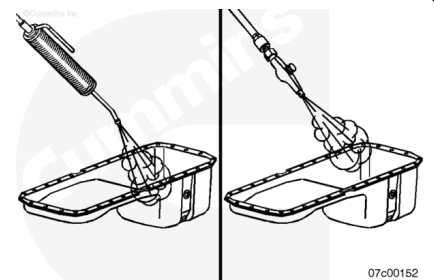

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Steam clean the lubricating oil pan.

Dry with compressed air.

Inspect the inside and the outside of the oil pan for cracks.


Replace the oil pan if it is cracked or broken.

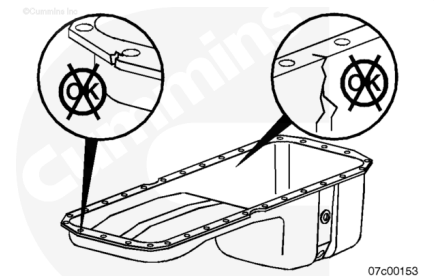

Install

Apply a 1.97 mm [1/8 in] bead of silicon sealant, Part Number 3164067, to each of the four T-joints where the front gear housing and flywheel housing gaskets intersect the oil pan gasket.


Note : If sump locations are being changed from the original installation, or a different oil pan is being installed, confirm that the correct lubricating oil dipstick, lubricating oil dipstick tube, and suction tube are installed.

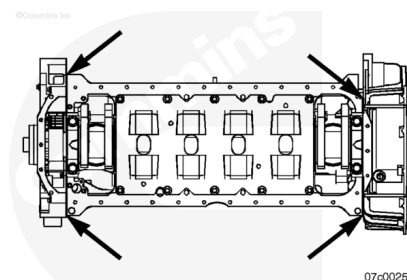

Install a new oil pan gasket.

Install the oil pan onto the cylinder block. Install one of the 13 mm oil pan mounting capscrews, hand-tight, on each side of the oil pan, halfway between the front and the rear of the oil pan.


Hand tighten all of the mounting capscrews.

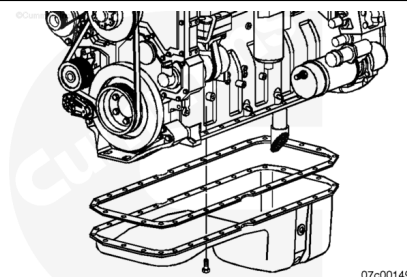

Tighten the 13 mm capscrews in the sequence shown.


At the end of the sequence, loosen and tighten capscrew Number 1 again.

Torque Value: 55 n•m [41 ft-lb]

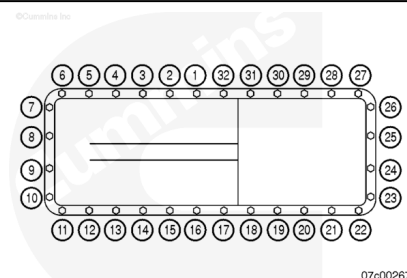

Install the oil drain plug(s).

Torque Value: 55 n•m [41 ft-lb]

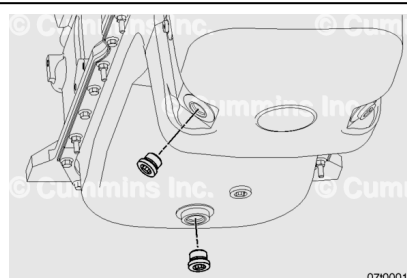

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Fill the engine with clean lubricating oil. Refer to Procedure 007-037 in Section 7.
(/qs3/pubsys2/xml/en/procedures/377/377-007-037.html)
- Connect the batteries. See equipment manufacturer service information.
- Operate the engine to normal operating temperature. Check for leaks and proper operation.

Last Modified: 13-Jun-2019
