

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.

Additional Service Items

- No additional service items required.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Remove the NOx sensor probe from the adapter pipe.


Remove

Remove the V-band clamp between the exhaust adapter pipe and the turbocharger.

Remove the V-band clamp between the exhaust adapter pipe and the OEM exhaust down-pipe.

Remove the adapter pipe assembly from the engine.


Remove the gasket from each end and discard. Do **not** use a screwdriver or other sharp tool to remove the gaskets, as this will damage the gasket seating area.

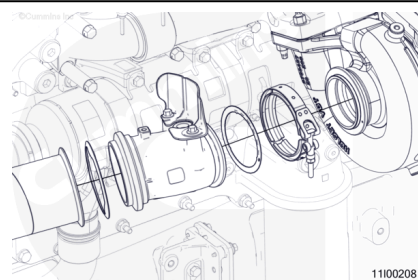

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

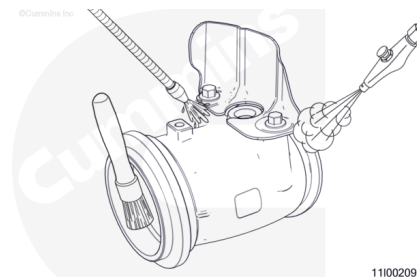

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Saturate the inside of the adapter pipe with safety solvent.

Mineral based solvents can be used if the results from the safety solvent cleaning are **not** acceptable.

Clean the inside of the adapter pipe with a non-abrasive brush.


Dry with compressed air.

Make sure the locator pin is in the adapter pipe. Replace the locating pin, if necessary.

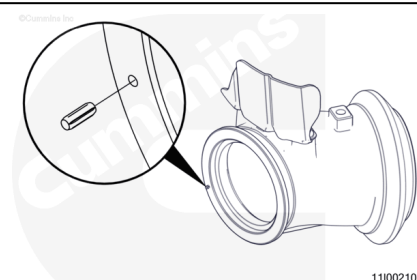

Inspect the V-band clamps for signs of overextension. The band **must not** be bent or cracked.


Replace the V-band clamp if damage is found.

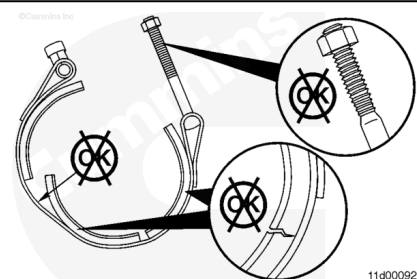

Inspect the NOx sensor heat shield for cracks or other damage.

Replace the heat shield if cracks or other damage is found.

Torque Value: 23 n•m [204 in-lb]

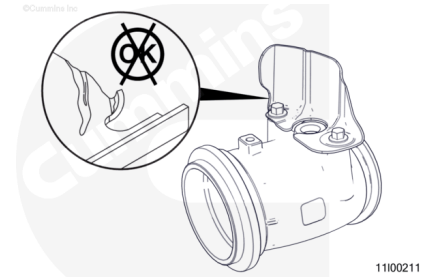


Install

Install new gaskets on each end of the adapter pipe.

Place the exhaust adapter pipe in position with the pin in the correct location in the turbocharger.

Tighten the V-band clamps on each end.

Torque Value: 11 n•m [97 in-lb]

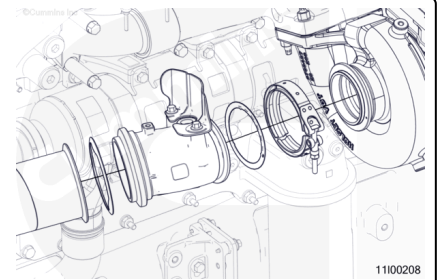

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Install the NOx sensor probe onto the adapter pipe.
- Connect the batteries. See equipment manufacturer service information.
- Start the engine. Check for leaks and proper operation.