

Trainings ▾

General Information

Vehicle may have more than one coolant level sensor. If multiple coolant level sensors are found extra attention is required to verify sensor being evaluated is connected to the ECM for proper diagnostics.

Select Service Tools

Recommended Cummins® Service Tools

- No recommended Cummins® service tools

Additional Service Items

- No additional service items required

Preparatory Steps


⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Remove the radiator cap.

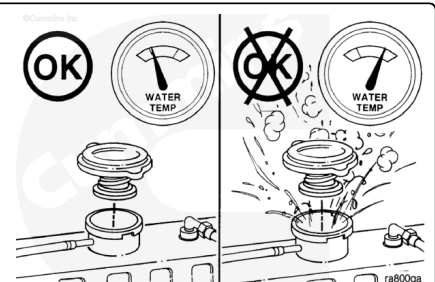


- Drain enough coolant from the cooling system to empty the radiator top tank. Refer to Procedure 008-018 in Section 8. (/qs3/pubsys2/xml/en/procedures/377/377-008-018-tr.html)

Remove

Lift up on the locking tab and pull the electrical connectors apart.


Remove the sensor.

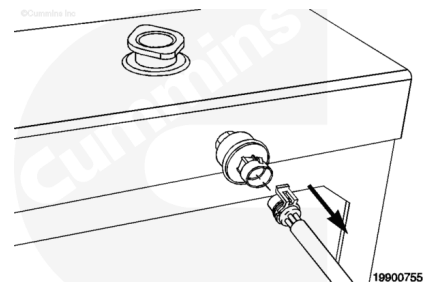

Install

Install and tighten the new sensor according to the vehicle manufacturer's instructions.

Push the electrical connectors together until they lock.

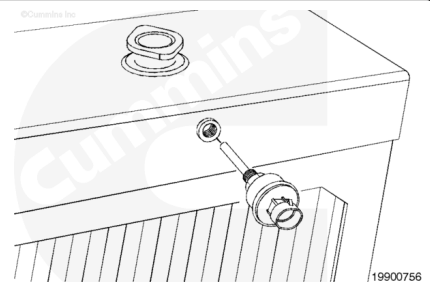


Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Fill the cooling system radiator top tank. Refer to Procedure 008-018 in Section 8.

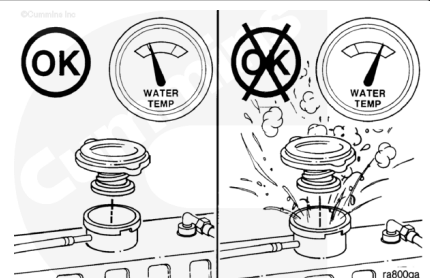

(/qs3/pubsys2/xml/en/procedures/377/377-008-018-tr.html)

- Install the radiator cap.
- Operate the engine to normal operating temperature and check for leaks and proper operation.

Last Modified: 10-Oct-2022
