


## Trainings ▾

### Remove

Before removing the main bearing caps, make certain that the caps are clearly marked for their location on the lubricating oil cooler side of the main bearing cap and cylinder block.

The number one cap is at the front of the engine.

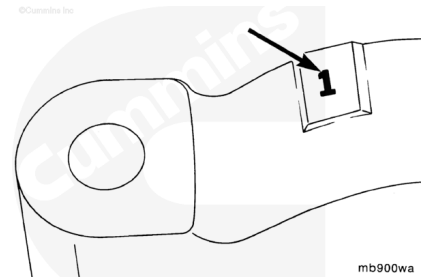

Loosen the main bearing capscrews completely, but do **not** remove.

#### **⚠ CAUTION ⚠**

**Do not pry on the main bearing caps to free them from the cylinder block. Damage to the main bearing caps and cylinder block can result.**




Use two of the main bearing cap bolts to “wobble” the main bearing cap loose, being careful **not** to damage the bolt threads.

Remove the main bearing cap.

Mark the lower main bearings for position and number as they are removed.

Use an awl to mark the bearing position in the tang area.

**Note :** Mark the bearing's position for future identification or possible failure analysis.

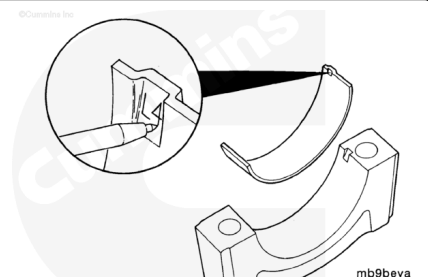

#### **⚠ WARNING ⚠**


**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this**

component or assembly.

**Note :** Lift the crankshaft straight up to reduce the possibility of damage to the crankshaft and cylinder block.

Install nylon lift sling, Part Number 3375957, around Number 3 and Number 4 rod bearing journals.

Attach the sling to a hoist and remove the crankshaft.

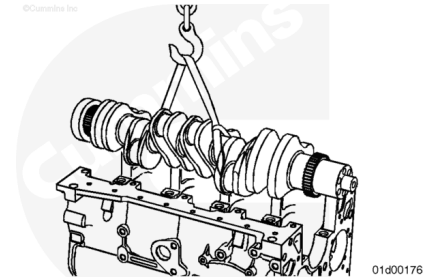

Remove the upper main bearings.

Use an awl to mark the bearing's position in the tang area.

**Note :** Mark the bearing's position for future identification or possible failure analysis.

