


Trainings ▾

Install

Install the six capscrews that hold the crankshaft pulley to the nose of the crankshaft.

Tighten crankshaft pulley capscrews.

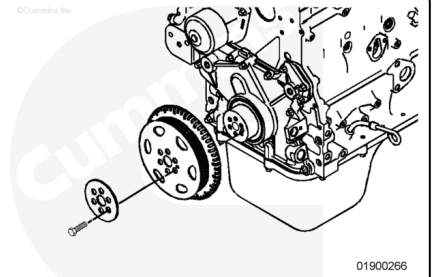

Torque Value:	Step 1	50 n.m [37 ft-lb]
	Step 2	Rotate 90 degrees