


## Trainings ▾

### Install

Position the front gear housing gasket on the alignment dowels. Use guide pins, M8 x 1.25 x 50, to assist in aligning the gasket and gear housing. Make sure to remove the guidepins after alignment.

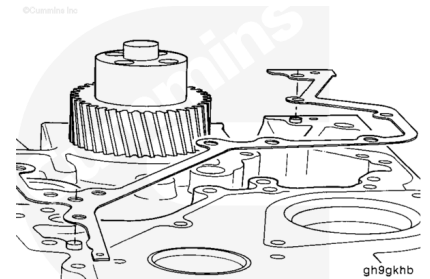

Carefully install the gear housing.  
Make sure the gasket is still in place.  
Install and tighten the mounting capscrews.

**Torque Value:** 24 n•m [18 ft-lb]

**Note :** If a new front gear housing and/or timing pin assembly is installed, the timing pin assembly must be accurately located. Refer to Procedure 001-049 (</qs3/pubsys2/xml/en/procedures/40/40-001-049.html>).

