


Trainings ▾

Remove

Remove the gear housing capscrews.

Note the location of the gear housing capscrews as they are removed. Some of the capscrews are an internal torx fastener and **must** be installed in the same location as removed to ensure proper clearance.

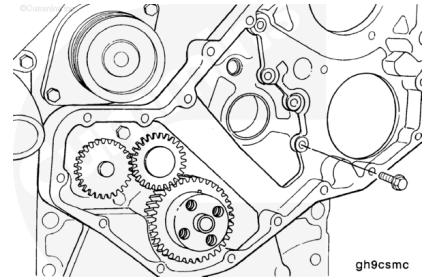

Use a plastic hammer to loosen the front gear housing.

Remove the gear housing.

