


Trainings ▾


Remove

Rotate the crankshaft with engine barring tool, Part Number 3824591, until the pistons are below the carbon deposits, which are found above the ring travel area.

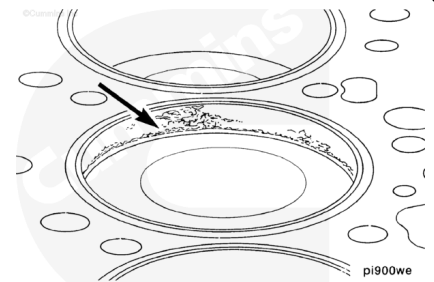


⚠ CAUTION ⚠

Do not use emery cloth or sandpaper to remove carbon from the cylinder bores. Aluminum oxide or silicon particles from these materials can cause serious engine damage.

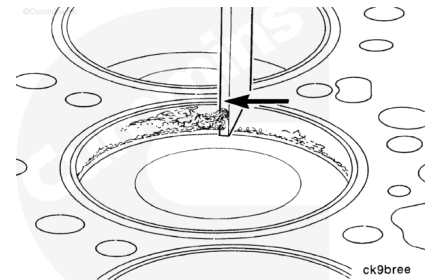


Use a scraper or a blunt-edged instrument to loosen the carbon deposits. Do **not** damage the cylinder with the scraper.

Remove the remaining carbon with a Scotch-Brite™ cleaning pad, or equivalent.

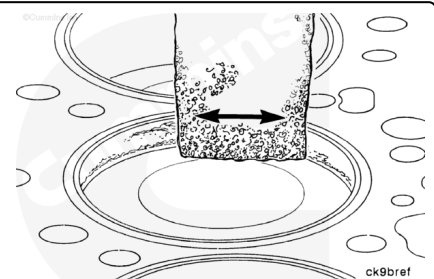

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury

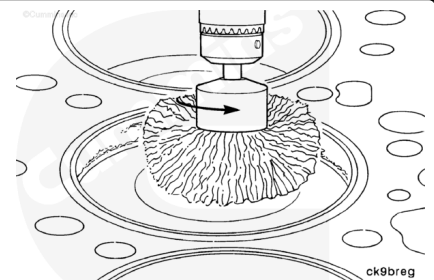

⚠ CAUTION ⚠


**Do not use the steel wire wheel in the piston travel area.
Operate the wheel in a circular motion to remove the
deposits.**

Note : An inferior quality wire wheel will lose steel bristles during operation, thus causing additional contamination.

An alternative method to remove the carbon ridge is to use a high-quality steel wire wheel installed in a drill or die grinder.


On pistons with anodized coatings, do **not** stamp the anodized coating on the outer rim.

Mark each piston according to the cylinder.

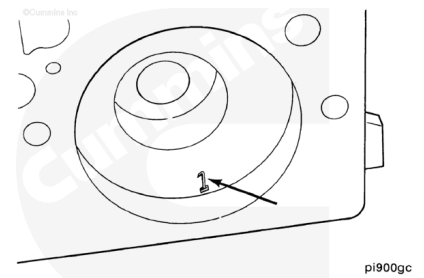

Rotate the crankshaft to position the connecting rod caps at bottom dead center for removal.


Mark each connecting rod and connecting rod cap according to the cylinder number location.

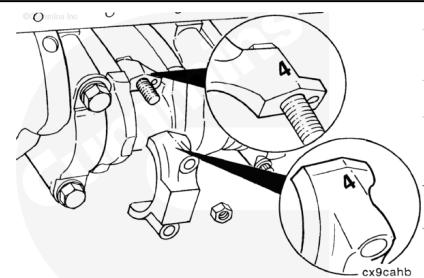

Loosen the connecting rod capscrews.


Note : Do not remove the capscrews from the connecting rods at this time.

Use a rubber hammer to hit the connecting rod capscrews to loosen the caps.

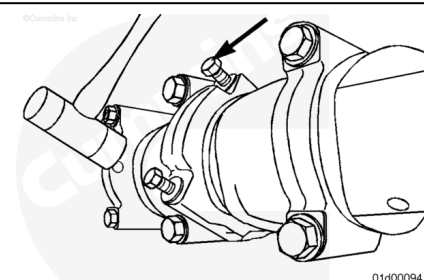

⚠ CAUTION ⚠

Do not damage the fracture-split surface on the connecting rod or connecting rod cap while the connecting rod caps are removed. If the fracture-split surface is damaged, the connecting rod and connecting rod cap must be replaced to help reduce the possibility of engine damage. Incorrect assembly can damage the rod.

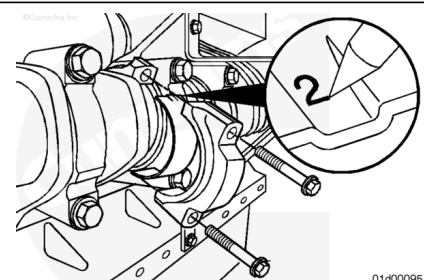

⚠ CAUTION ⚠

When setting the connecting rod cap down do not set the cap down on the fracture-split surface. Damage to the fracture-split surface can result.

Remove the connecting rod capscrews.


Remove the connecting rod cap.

Remove the lower connecting rod bearing.


Mark the cylinder number and the letter "L" (lower) on the flat surface of the bearing tang.

Push the connecting rod and piston assembly out of the cylinder bore. Care **must** be taken **not** to damage the connecting rod or bearing.

Remove the upper rod bearing.

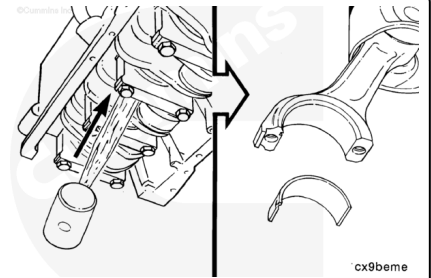

Mark the cylinder number and the letter "U" (upper) on the flat surface of the bearing tang.

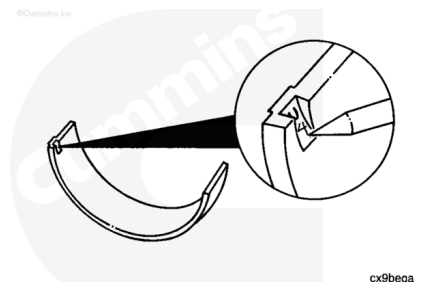

The piston and connecting rod assemblies **must** be installed in the same cylinder number from which they were removed, to provide proper fit of worn mating surfaces, if parts are reused.

Use a tag to mark the cylinder number from which each piston and rod assembly were removed.

Place the rod and piston assemblies in a container to protect them from damage.

