

Trainings ▾


Install

Note : The block stiffener plate must be installed so that the center ribs are bent away from the block, to ensure proper clearance from the block main caps.

Note : For some oil pan/oil suction tube configurations, one of the block stiffener mounting capscrews may be different than the rest. This capscrew, with a lower head profile, should be installed in the opening adjacent to the oil suction tube mounting location. The low profile capscrew ensures in some applications that there is sufficient clearance between the oil suction tube and the block stiffener mounting capscrew.

Install the block stiffener plate so that the exterior portion of the block stiffener plate with the recess is next to the oil suction tube mounting location at the front of the engine.

Install the block stiffener plate mounting capscrews.

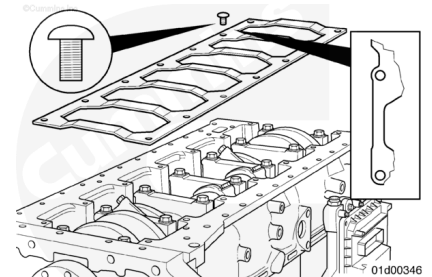

Block Stiffener Plate Capscrews	43 n.m	[32 ft-lb]
------------------------------------	--------	------------