


Trainings ▾

General Information

This procedure only covers bedplates that are attached to the cylinder block and **not** between the lubricating oil pan and cylinder block. If the bedplate is in between the lubricating oil pan and the cylinder block, refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/40/40-007-025-tr.html>) for installation and removal procedures.

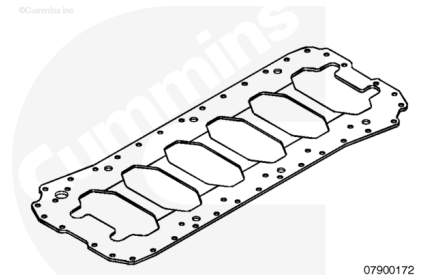


Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

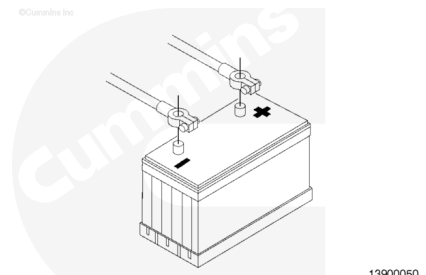

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil.

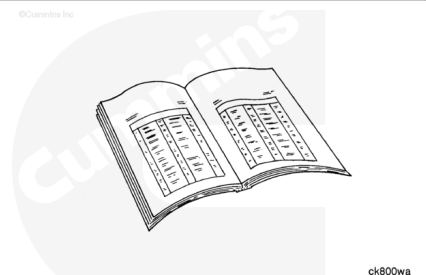


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

- Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/40/40-007-037.html>)
- Remove the lubricating oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/40/40-007-025-tr.html>)
- Remove the lubricating oil suction tube. Refer to Procedure 007-035 (</qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html>).

Remove

Note : For some oil pan/oil suction tube configurations, the block stiffener plate capscrew closest to the lubricating oil suction tube may be different than the rest. If equipped, note the capscrews location for installation. The low profile capscrew ensures in some applications that there is sufficient clearance between the oil suction tube and the block stiffener mounting capscrew.

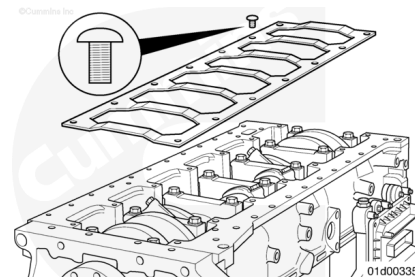


Remove the capscrews and block stiffener plate.

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

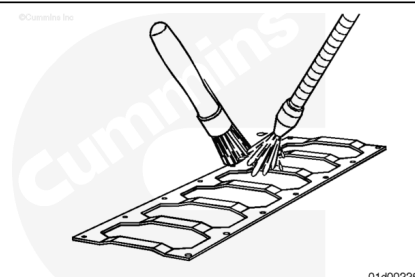


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the block stiffener plate with solvent. Dry with compressed air.


Check the block stiffener plate for cracks. Replace if damage is present.

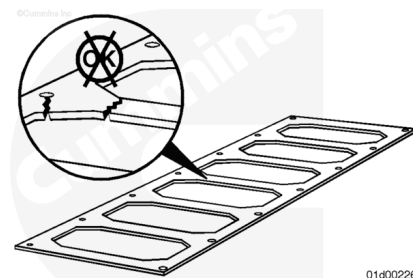

Install

Note : The block stiffener plate must be installed so that the center ribs are bent away from the block, to ensure proper clearance from the block main caps.

Note : For some oil pan/oil suction tube configurations, one of the block stiffener mounting capscrews may be different than the rest. This capscrew, with a lower head profile, should be installed in the opening adjacent to the oil suction tube mounting location. The low profile capscrew ensures in some applications that there is sufficient clearance between the oil suction tube and the block stiffener mounting capscrew.

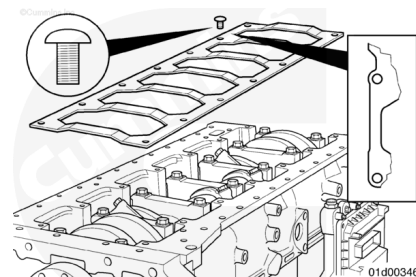

Install the block stiffener plate so that the exterior portion of the block stiffener plate with the recess is next to the oil suction tube mounting location at the front of the engine.

Install the block stiffener plate mounting capscrews.

Block Stiffener Plate Capscrews	43 n.m	[32 ft-lb]
------------------------------------	--------	------------

Finishing Steps


- Install the lubricating oil suction tube. Refer to Procedure 007-035 (</qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html>)
- Install the lubricating oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/40/40-007-025-tr.html>)



- Fill the engine with clean lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/40/40-007-037.html>).

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

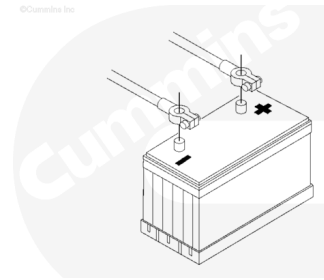

13900050

- Connect the batteries.

- Operate the engine and check for leaks.

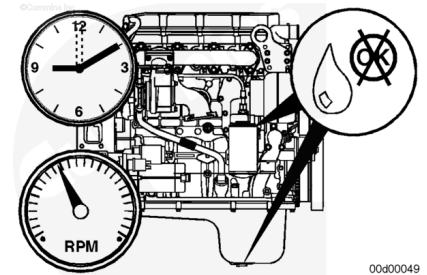

00900049