

Trainings ▾

General Information

This procedure is for engines with 4 valves per cylinder only.

©Cummins Inc.


Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

©Cummins Inc.

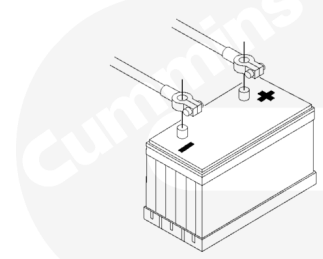

13900050

- Remove rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/40/40-003-011-tr.html>)
- Remove rocker lever. Refer to Procedure 003-008 (</qs3/pubsys2/xml/en/procedures/40/40-003-008-tr.html>).

©Cummins Inc.




ck800wa

Remove

Note : Make note of the crosshead location and orientation. If the crossheads are reused, they must be installed in their original location and orientation.


Remove the crossheads.

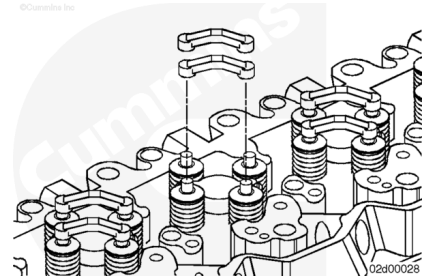

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

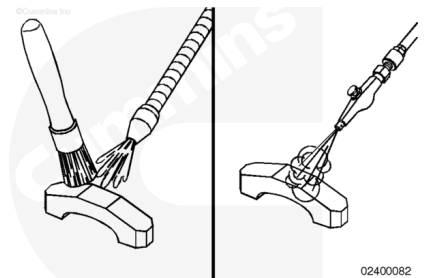

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the crossheads with solvent. Dry with compressed air.

Inspect the crossheads for cracks and/or excessive wear on rocker lever and valve tip mating surfaces.

Inspect the contact pads for cracks and other damage.


Replace the crossheads if any damage is found.

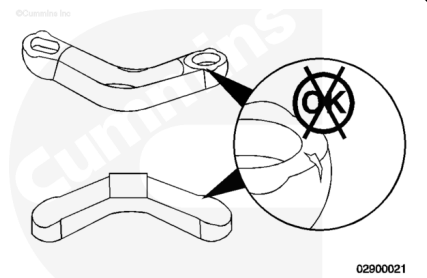

Install


Note : The crosshead has a round and oval hole. If installing new crossheads, it is **not** required to place the holes in a particular position. If crossheads are being reused, make sure to install them in their original location and orientation.

Install the crossheads on the valve stems.

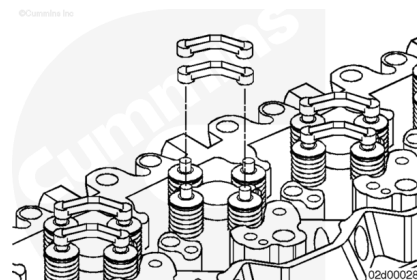


Finishing Steps

- Install rocker lever. Refer to Procedure 003-008 (</qs3/pubsys2/xml/en/procedures/40/40-003-008-tr.html>)
- Install rocker lever cover and gasket. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/40/40-003-011-tr.html>).

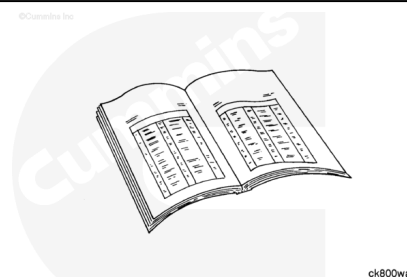

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

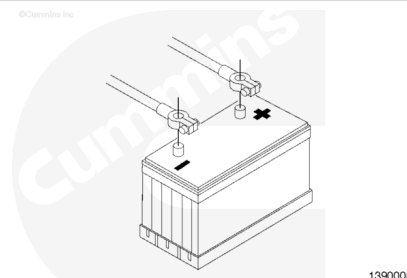

- Connect the batteries.

- Run the engine and check for leaks.

