


Trainings ▾

Remove

B4.5 RGT Engines


Loosen the adjusting screw locknuts.

Loosen the adjusting screws until they stop.

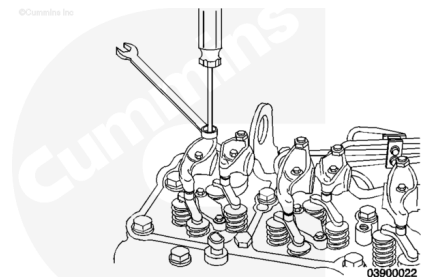


Remove the capscrews from the rocker lever pedestals.

Remove and mark the pedestals and rocker lever assemblies one at a time as to their location and position.

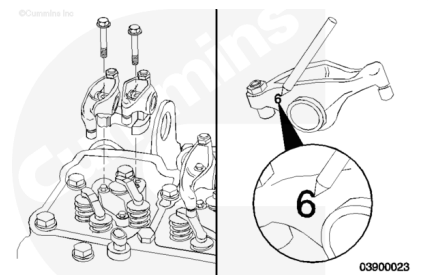


B3.9, B5.9, and B4.5 Engines

Loosen the adjusting screw locknuts. Loosen the adjusting screws until they stop.

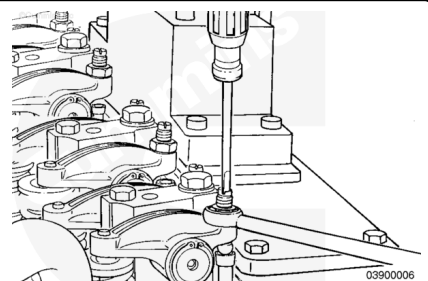

Remove the capscrews from the rocker lever pedestals.

Remove the pedestals and rocker lever assemblies.

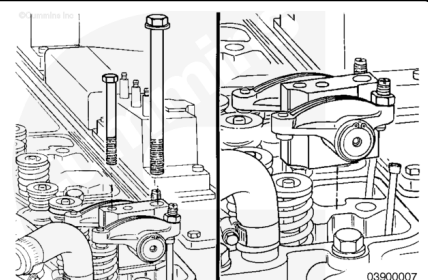

Last Modified: 31-Mar-2006
