


Trainings ▾

Maintenance Check

Inspect the closed-crankcase ventilation piping and hoses for leaks, holes, cracks, or loose connections. Tighten the hose clamps, if necessary to proper torque. Refer to Section V for torque specification. The illustration shown is one of two options available for the closed-crankcase ventilation system.

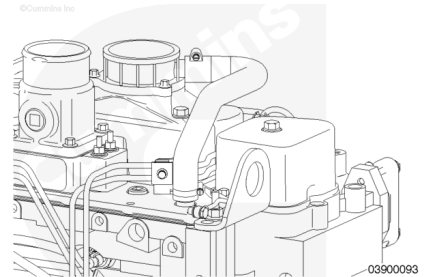

The illustration shown is the second of two options available for the closed-crankcase ventilation system.

