


Trainings ▾

General Information

The tappet cover is located on the intake side of the engine. For some engines, the tappet cover also contains the crankcase breather.

Removing the tappet cover will **not** allow for removal of the tappets. The tappets **must** be removed through the bottom of the engine with the lubricating oil pan removed.

Note : Rear Gear Train engines do **not** have a tappet cover.

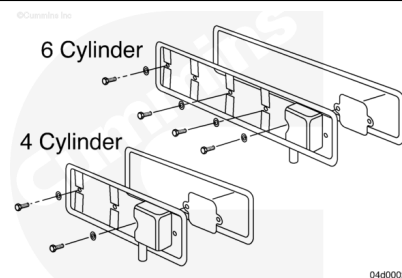


Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

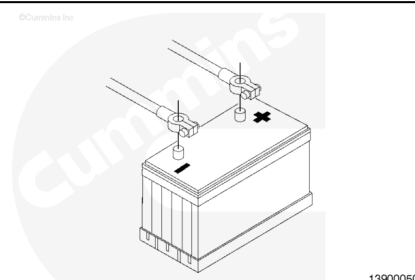

- If required, remove the fuel filter(s). Refer to Procedure 006-015 (/qs3/pubsys2/xml/en/procedures/40/40-006-015-tr.html)
- If required, remove the fuel drain line. Refer to Procedure 006-021 (/qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html)
- Remove the fuel injection pump. For rotary fuel injection pumps refer to Procedure 005-014 (/qs3/pubsys2/xml/en/procedures/40/40-005-014-tr.html). For inline fuel injection pumps refer to Procedure

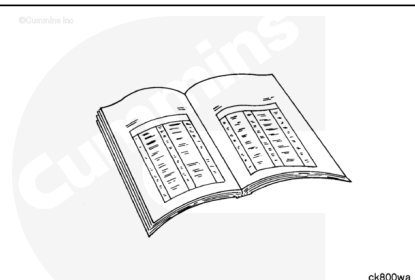


005-012 (/qs3/pubsys2/xml/en/procedures/40/40-005-012-tr.html)

- For open crankcase systems, disconnect and remove the crankcase breather tube. Refer to Procedure 003-018 (/qs3/pubsys2/xml/en/procedures/40/40-003-018-tr.html)
- For closed crankcase system, disconnect the closed crankcase ventilation hoses. Refer to Procedure 003-024 (/qs3/pubsys2/xml/en/procedures/40/40-003-024-tr.html).

Remove

Remove the tappet cover, mounting capscrews, sealing washers, and gasket.

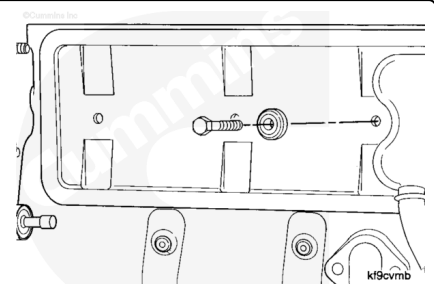

Clean and Inspect for Reuse

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the tappet cover and crankcase breather tube in a solution of detergent in hot water.

Dry the tappet cover and tube with compressed air.

Inspect the tappet cover/crankcase breather and tube internally for obstructions or sludge buildup.

If the tappet cover/crankcase breather and/or tube is blocked, the tappet cover/crankcase breather and/or tube **must** be cleaned with a strong solution of detergent or replaced to

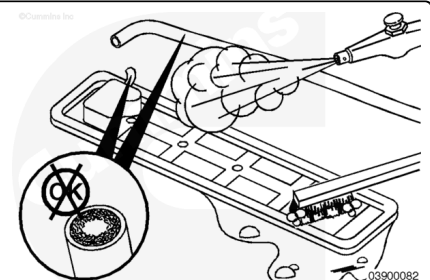


prevent excess crankcase pressure buildup.

Dry tappet cover/crankcase breather and tube with compressed air.

Install

Install the tappet cover gasket onto the tappet cover. The tappet cover gasket **must** be installed as shown in the illustration.

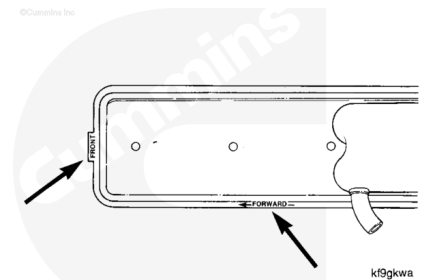


Install the tappet cover, gasket, sealing washers and mounting capscrews onto the engine block.

Note : Some of the tappet cover mounting capscrews also secure the fuel drain. It may be necessary to install the remaining mounting capscrews when the fuel drain is installed.

Tighten the tappet cover mounting capscrews.

Torque Value: 24 n•m [18 ft-lb]

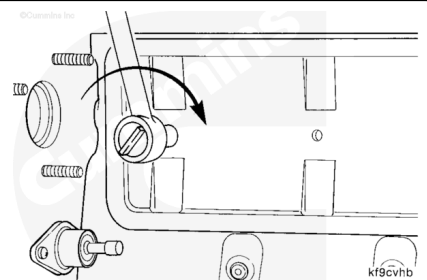

Finishing Steps

- For closed crankcase system, connect the closed crankcase ventilation hoses. Refer to Procedure 003-024 (</qs3/pubsys2/xml/en/procedures/40/40-003-024-tr.html>)
- For open crankcase systems, connect and install the crankcase breather tube. Refer to Procedure 003-018 (</qs3/pubsys2/xml/en/procedures/40/40-003-018-tr.html>)
- Install the fuel injection pump. For rotary fuel injection pumps refer to Procedure 005-014 (</qs3/pubsys2/xml/en/procedures/40/40-005-014-tr.html>). For inline fuel injection pumps refer to Procedure




005-012 (/qs3/pubsys2/xml/en/procedures/40/40-005-012-tr.html)

- If removed, install the fuel drain line. Refer to Procedure 006-021 (/qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html)
- If removed, install the fuel filter(s). Refer to Procedure 006-015 (/qs3/pubsys2/xml/en/procedures/40/40-006-015-tr.html).

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries.

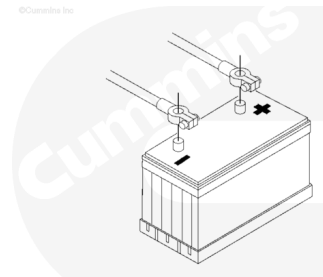

13900050