

Trainings ▾


Initial Check

Note : The fuel heater is not controlled by the electronic control module (ECM). A bimetallic strip acts as a thermostat. The fuel heater will turn on at approximately 1°C [34°F] and turn off at approximately 18°C [64°F].

Remove the 2-pin connector from the fuel heater.

Using an ohmmeter, check the continuity of the fuel heater by placing the ohmmeter test leads across the pins of the fuel heater.


If the heater circuit is open, replace the fuel heater.

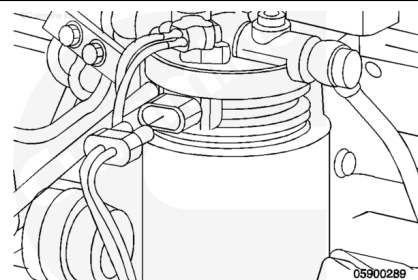

Check for proper voltage to the fuel heater.

Minimum Voltage
12 VDC

If the voltage is **not** within specifications, refer to OEM service manual.

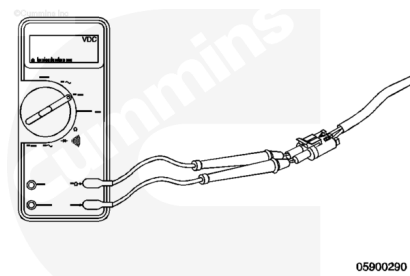


Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

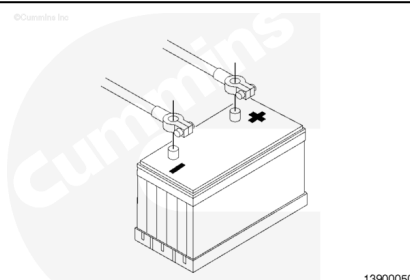


Remove

Disconnect the connector from the fuel heater.

Disconnect the connector from the water-in-fuel (WIF) sensor.

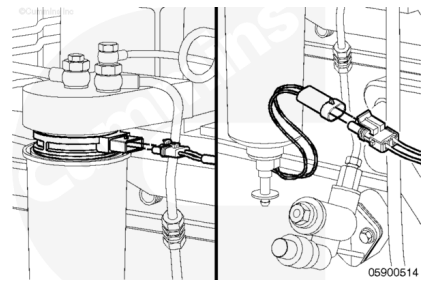


Push on the fuel drain valve for approximately 5 seconds to reduce fuel spillage during filter removal.

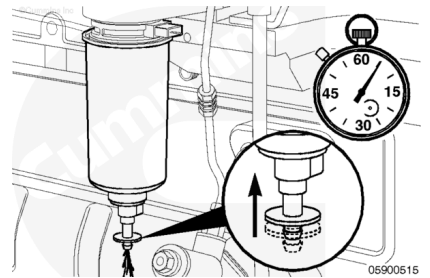

Remove the fuel filter.


Remove the fuel filter spud.

Remove the fuel heater from the filter head. The heater should be able to be pulled off the filter head.

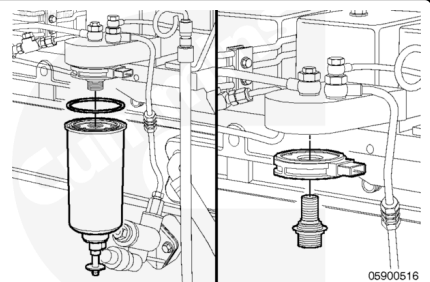

Install


Place the fuel heater, gasket side facing up, against the filter head.

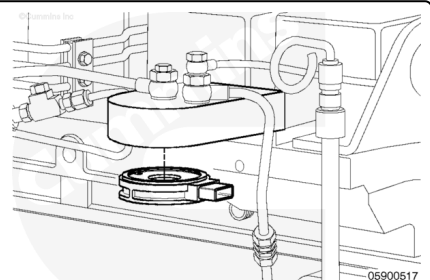

Apply Loctite to the filter spud.


Install the fuel filter spud.

Torque Value: 27 n•m [20 ft-lb]

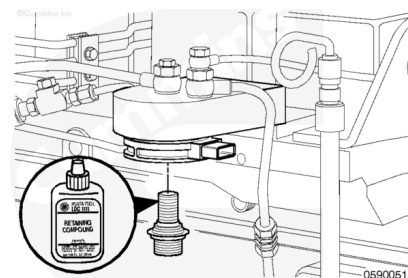


Install an o-ring between the fuel heater and the filter canister.

Install the fuel filter.

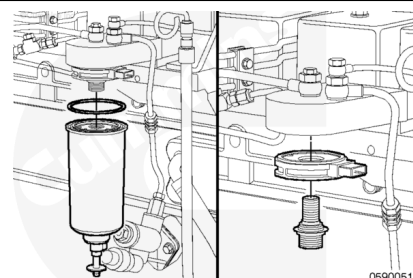

Connect the connector to the water-in-fuel sensor.

Connect the connector to the fuel heater.

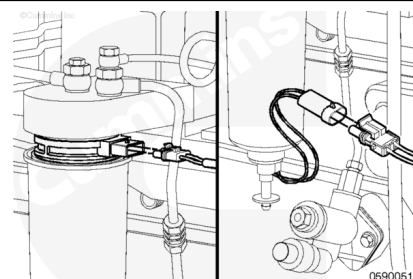

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

