


Trainings ▾

Pressure Test


Inspect to determine if the fuel transfer pump is delivering fuel.
Measure the output pressure at the inlet of the injection pump.

	kpa		psi
High-flow- automotive	172	MIN	25
Low-flow- industrial	83	MIN	12

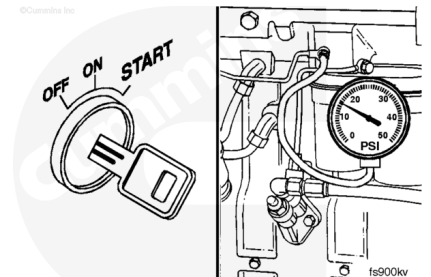


If the required volume is **not** being delivered, measure the transfer pump inlet restriction with a vacuum gauge between the transfer pump inlet and the supply line (4) from the fuel tank.

kpa		in-hg
13.55	MAX	4

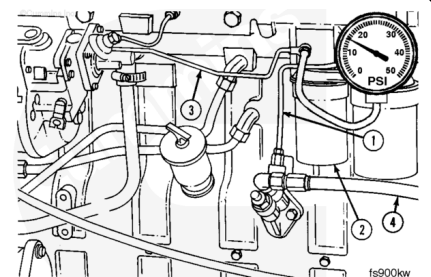


Note : Frequent fuel filter replacement to get full power from the engine can indicate a worn fuel lift pump.

The pressure drop across the filter(s) will increase as the filter removes contaminants from the fuel. A worn fuel lift pump will have reduced capacity to force fuel through a dirty filter. This can cause low engine power.

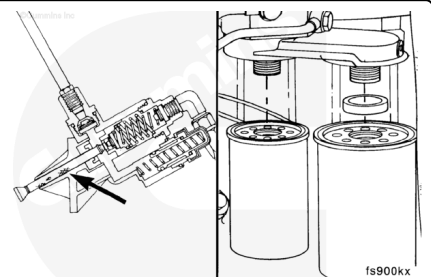


If the fuel is aerated or the volume is low, isolate the fuel transfer pump by connecting the fuel transfer pump inlet to a temporary supply, and perform the same check as above.

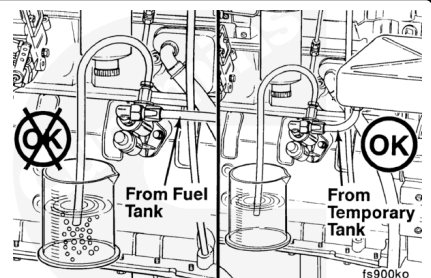


If the fuel transfer pump delivers the required volume of fuel from a temporary supply, check for restrictions or suction leaks in the fuel circuit to the fuel transfer pump:

1. Supply line
2. Prefilter
3. Supply line
4. Supply tank
5. Tank vent.

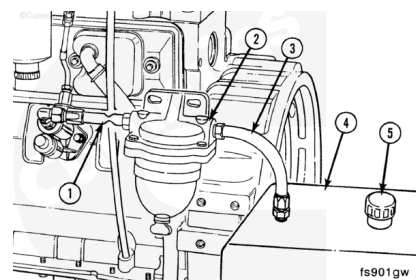


Check for a plugged supply tank vent first.

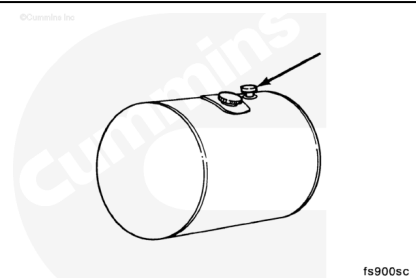

In cold weather check for gelled diesel fuel blocking the prefilter.

Clean or replace the prefilter.

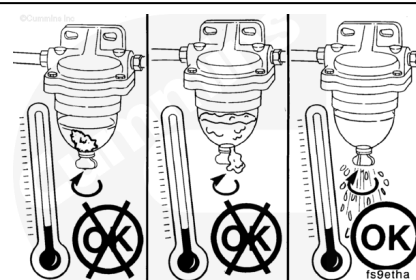

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Inspect the fuel supply lines for restrictions.

Remove and blow out the fuel supply lines with compressed air, if necessary.

