


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

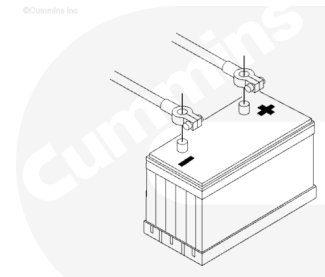


Remove

Front Gear Train

Bosch® and Stanadyne Rotary Pumps

10 mm


Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

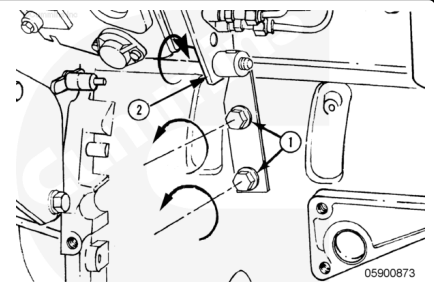

In-line Fuel Injection Pumps

10 mm

Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

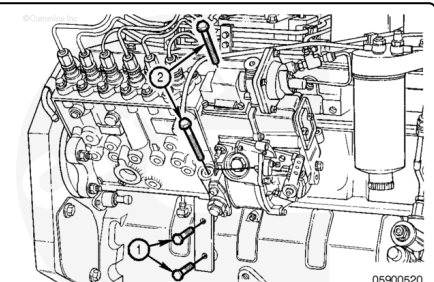


Four-Cylinder

Remove the capscrews (1) which mount support bracket assembly to fuel pump.

Remove the capscrews (2) which mount the support bracket assembly to the engine block.


Note : Not all four cylinder engines are equipped with this style of bracket. If the engine is equipped with a two piece bracket, remove the bolts as depicted.

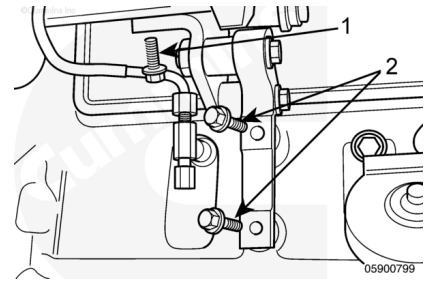

Rear Gear Train

10 mm

Remove the capscrew that is connected to the pump and the tail support bracket (2) first; then remove the capscrews from the bracket (1) and block.

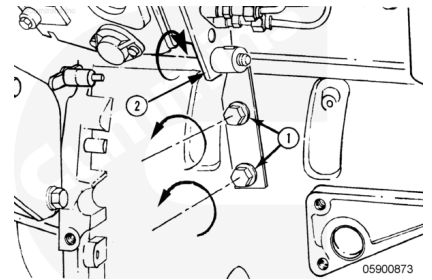


Install

Front Gear Train

Bosch®; and Stanadyne Rotary Pumps

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

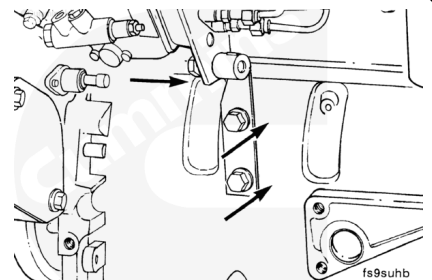

10 mm

Tighten capscrew and bracket to the injection pump (2) first; then the capscrews to the bracket and block (1).


Torque Value: 24 n•m [18 ft-lb]

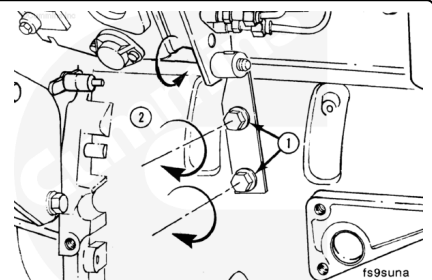

In-line Fuel Injection Pumps

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

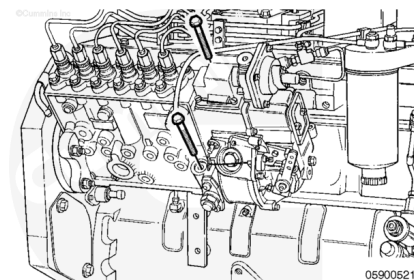

10 mm

Tighten bracket to the block (1) first; then to the injection pump (2).

Torque Value: 24 n•m [18 ft-lb]

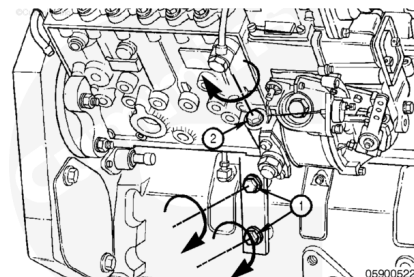

Four-Cylinder

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

Tighten the capscrews (2) which mount the support bracket assembly to the engine block.

Tighten the capscrews (1) which mount support bracket assembly to fuel pump.

Torque Value: 24 n•m [18 ft-lb]


Note : Not all four cylinder engines are equipped with this style bracket. If the engine is equipped with a two piece bracket, install the bolts as depicted.

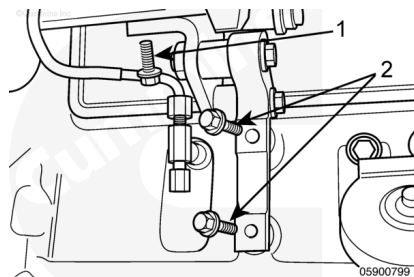

Rear Gear Train

Install the tail support bracket finger-tight before final tightening.


Note : Tighten bracket to block before tightening the bracket to the pump.

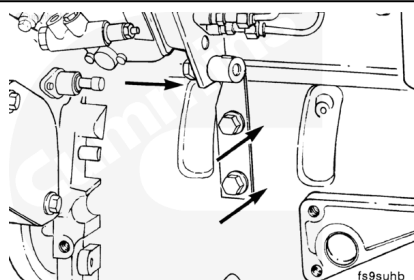

10 mm

Tighten capscrew and bracket to the injection pump (2) first; then the capscrews to the bracket and block (1).

Torque Value: 24 n•m [18 ft•lb]

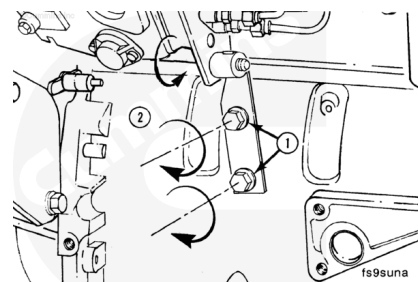


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries.

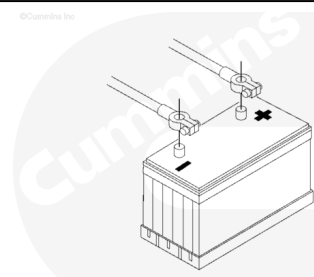

13900050