

Trainings ▾


Remove

⚠ CAUTION ⚠

To prevent the engine from starting, disconnect the fuel shutdown wiring. Residual fuel in the injection pump can cause the engine to start.

⚠ CAUTION ⚠


Do not crank the starter for more than 30 seconds at a time. Doing so can result in starter damage. Also, high voltage during cranking can damage the shutdown solenoid.

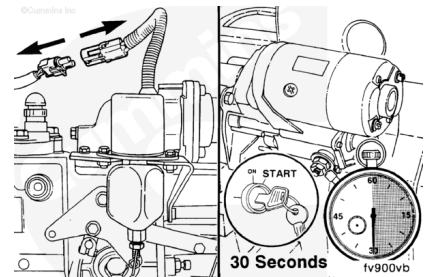

Disconnect the fuel shutdown solenoid wire.

Measure the engine cranking speed with a handheld tachometer, Part Number 3377462.

The minimum cranking speed is 120 rpm.

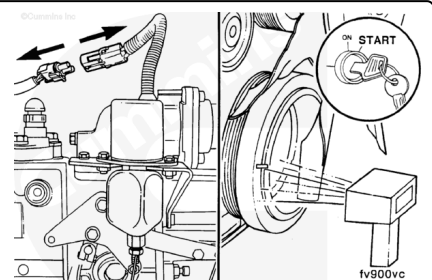

Remove the two fuel lift pump mounting capscrews.

Remove the fuel lift pump.

