


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

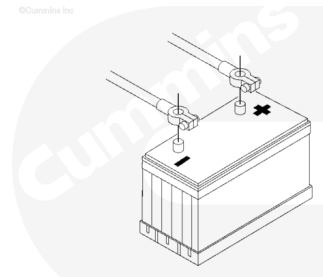

Remove

Remove the pressure relief valve and copper sealing washer.

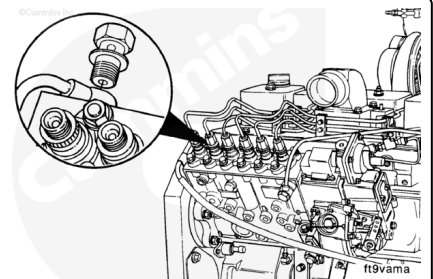

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to avoid personal injury.



⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.


Thoroughly flush the high-pressure relief valve with a mixture of strong detergent and water or solvent.

Dry with compressed air.

⚠ CAUTION ⚠


A sticky check ball can result in engine damage and low power.

Use a small screwdriver to check that the check ball is **not** sticking in the high-pressure relief valve assembly.

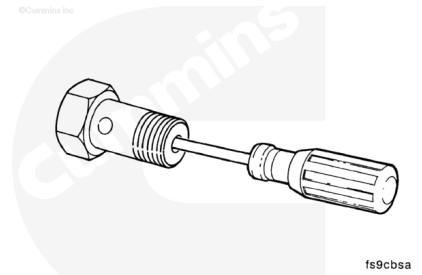

Install


Install the high-pressure relief valve assembly.

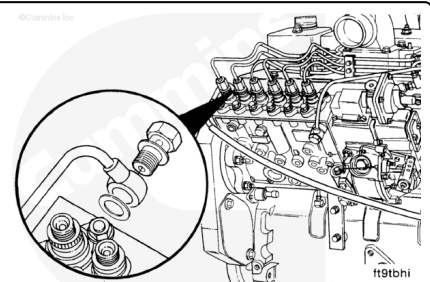

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

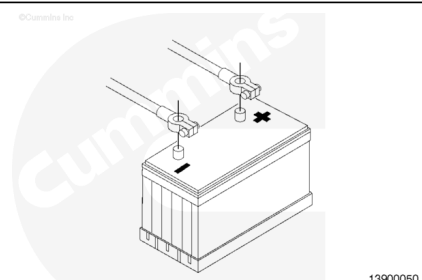

- Connect the batteries
- Operate the engine and check for leaks.

Last Modified: 31-Mar-2006
