


Trainings ▾

Remove

Distributor-Type Fuel Injection Pumps

Remove the fuel tube from the manifold fitting and the pump.

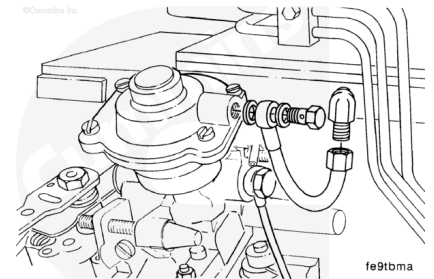

In-Line Pumps

Remove the AFC tube.

