

Trainings ▾

Preparatory Steps


- Remove the capscrews from the hold-down clamps. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>)
- Remove the fuel drain line banjo fitting capscrews and washers. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>)
- Disconnect the fuel drain line fittings. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>).




Measure

Install the 0 to 207-kPa [0 to 30-psi] pressure gauge.

Note : The disconnected return line tee (return from the pump) needs to be capped.

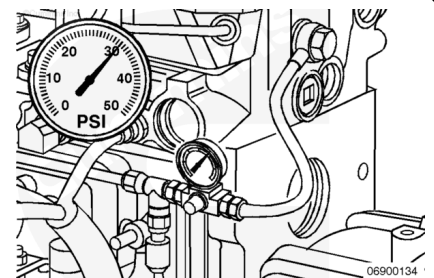


Operate the engine at rated speed and no load.

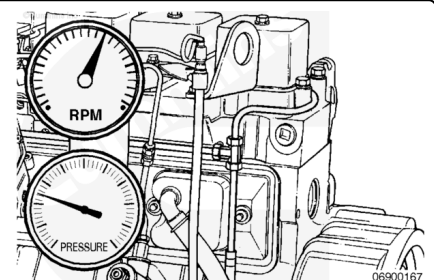


Observe the reading on the gauge.

mm-hg		in-hg
518	MAX	20.4

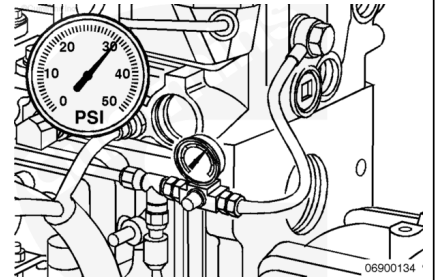

If the drain line pressure is out of specification, check for bends and kinks in the drain lines.

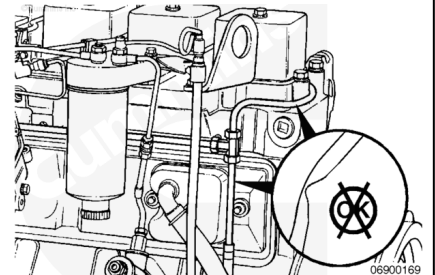

Finishing Steps

- Install the fuel drain line fittings. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>)
- Install the fuel drain line banjo fitting capscrews and washers. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>)
- Install the hold down clamp capscrews. Refer to Procedure 006-021 (</qs3/pubsys2/xml/en/procedures/40/40-006-021-tr.html>).

