


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Drain the fuel-water separator into a container, and dispose of contents in accordance with local environmental regulations.

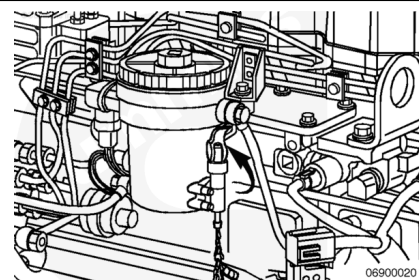


Lift up on the filter drain lever to drain fuel out of the filter for approximately 5 seconds. This will eliminate fuel from running over the top of the filter upon removal.

Remove

Clean all debris from around the canister lid.

Remove the filter lid and filter element. A crescent wrench can be used if the lid can **not** be removed by hand.

Note : Remove the filter element by twisting the element sideways from the filter lid.

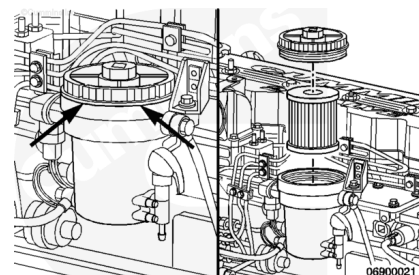


Install

Install the new element in the canister lid, and place back in the canister by twisting **clockwise**.

Refer to Procedure 018-024

(</qs3/pubsys2/xml/en/procedures/40/40-018-024.html>)
(Cummins/Fleetguard® Filter Specifications) in Section V.

Note : The replacement filter element comes with a new o-ring for the canister lid. The o-ring must be

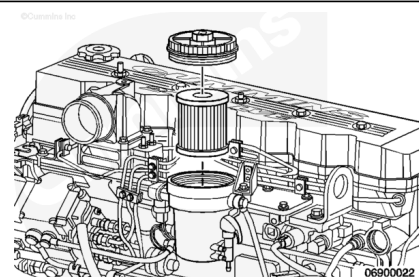

replaced with the filter element.

Lubricate the o-ring with clean engine oil.

Hand-tighten the canister lid.


Prime

Controlled venting is provided at the injection pump through the fuel drain manifold. Small amounts of air introduced by changing the filters or injection pump supply line will be vented automatically if the fuel filter is changed in accordance with the instructions.




However, manual bleeding will be required if one of the following conditions exists:

- The fuel filter is **not** filled prior to installation
- The fuel injection pump is replaced
- The high-pressure fuel line connections are loosened or the lines are replaced
- It is an initial engine start-up or start-up after an extended period of no engine operation.

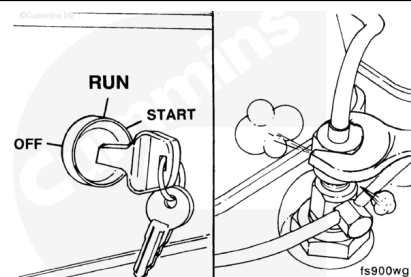


Open the bleed screw.

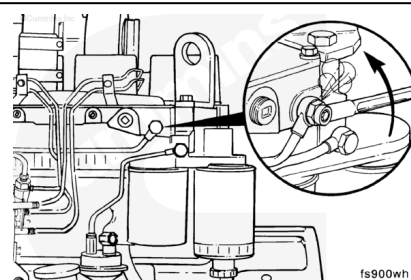

Operate the hand lever until the fuel flowing from the fitting is free of air.

Tighten the bleed screw.

Torque Value: 9 n•m [80 in-lb]

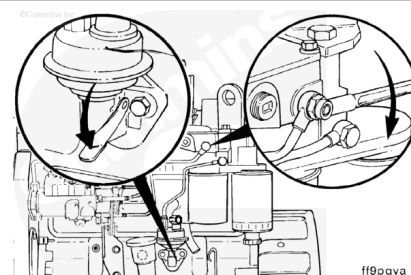


Air and fuel can be vented from the illustrated vent locations on the Bosch® VE fuel injection pumps.

Loosen the vent screw and operate the priming lever on the fuel transfer pump until the fuel injection pump is primed.

Tighten the vent screw.

Torque Value: 9 n•m [80 in-lb]

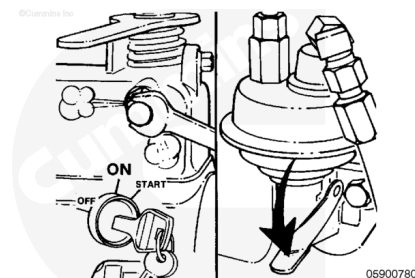


⚠ CAUTION ⚠

It is necessary to turn the keyswitch to the ON position. Because the engine can start, be sure to follow all safety precautions. Use the normal engine starting procedure.

⚠ CAUTION ⚠

When using the starting motor to vent the system, do not engage it for more than 30 seconds, or starter damage will occur. Wait 2 minutes before starting the engine again.

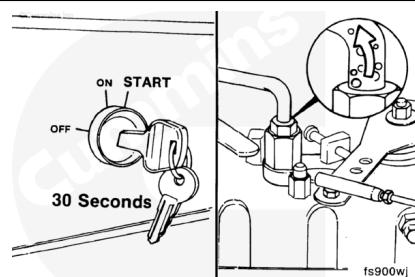

Air can also be vented through the fuel drain manifold line by operating the starting motor.