

Trainings ▾

General Information

Due to the number of different fuel filter head designs and mounting locations, the steps in this procedure have been written to be generic. Some of the illustrations may **not** represent the parts being removed or installed.

The fuel filter is integrated into the cylinder head on some engines. On other engines the fuel filter head and fuel filter head bracket may be one piece.

Note : The fuel filter head may be remotely mounted off the engine.


©Cummins Inc.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.

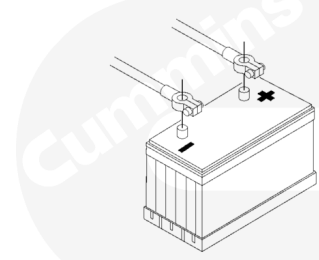

13900050

- Disconnect the batteries. See equipment manufacturer service information.

- Remove the fuel supply and fuel return line connectors. Refer to Procedure 006-024 in Section 6. (</qs3/pubsys2/xml/en/procedures/40/40-006-024-tr.html>)
- Remove the fuel filter. Refer to Procedure 006-015 in Section 6. (</qs3/pubsys2/xml/en/procedures/40/40-006-015-tr.html>)
- Disconnect the fuel heater connector, if applicable.

©Cummins Inc.




ck800wa

Remove

Front Gear Train

Remove the two capscrews retaining the filter head.


Remove the filter head from the engine.

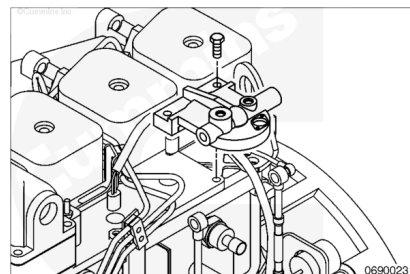

Rear Gear Train


Remove the three capscrews holding the fuel filter bracket to the cylinder block.

Remove the four capscrews holding the fuel filter head to the fuel filter head bracket.

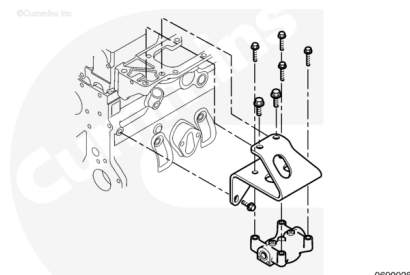


Disassemble

Remove the fuel heater, if equipped. Refer to Procedure 005-008 in Section 5 (</qs3/pubsys2/xml/en/procedures/40/40-005-008.html>).

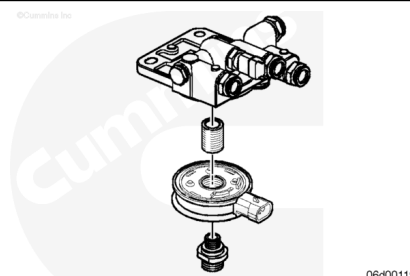


Remove the dual-filter adapter, if equipped.

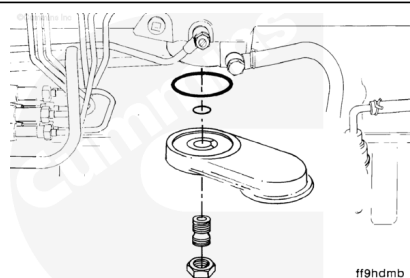

Clean and Inspect for Reuse

Inspect the filter head for cracks, passage blockage, and material or debris on the sealing surfaces.

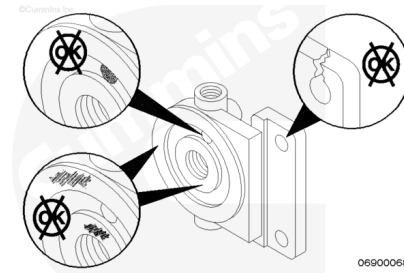

Assemble


Apply threadlocker, Part Number 3375068, or equivalent, to the filter adapter threads that are engaging the filter head.

Assemble the filter head.

Install the filter adapter and fuel heater.

Torque Value: 27 n•m [20 ft-lb]


Note : Make sure there is an o-ring between the filter head and heater.

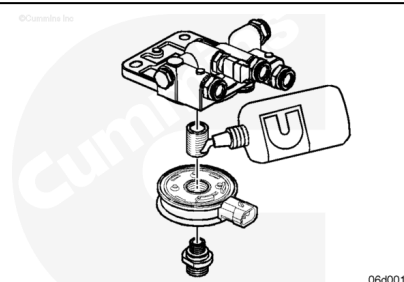

Apply threadlocker, Part Number 3375068, or equivalent, to the filter adapter threads that are engaging the fuel filter head **only**.

Install dual filter adapter, if equipped.

Torque Value: 60 n•m [44 ft-lb]

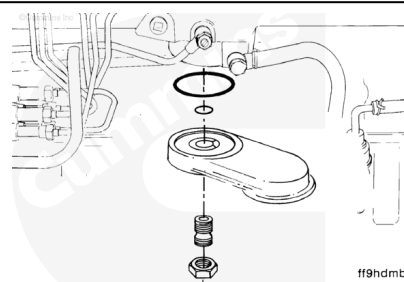


Install

Front Gear Train

Install the fuel filter head.

Tighten the two retaining capscrews.

Torque Value: 24 n•m [18 ft-lb]

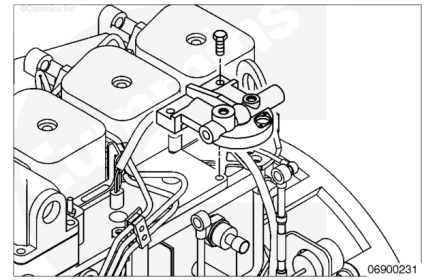

Rear Gear Train

Tighten the four M8 capscrews fastening the fuel filter head to the fuel filter head bracket.

Torque Value:

M8

1. 18 n•m [14 ft-lb]

Install the fuel filter head bracket on the engine. Finger tighten the two M10 capscrews to the head and the remaining M8 capscrews into the cylinder block.

Tighten the fuel filter head bracket capscrews.

Torque Value:


M8

1. 23 n•m [17 ft-lb]

Torque Value:

M10

1. 45 n•m [33 ft-lb]

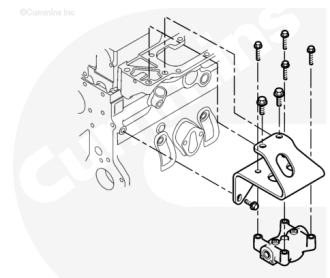


Finishing Steps

- Connect the fuel supply and return line connectors. Refer to Procedure 006-024 in Section 6. (</qs3/pubsys2/xml/en/procedures/40/40-006-024-tr.html>)
- Install the fuel filter. Refer to Procedure 006-015 in Section 6. (</qs3/pubsys2/xml/en/procedures/40/40-006-015-tr.html>)
- Connect the fuel heater connector, if applicable.



⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

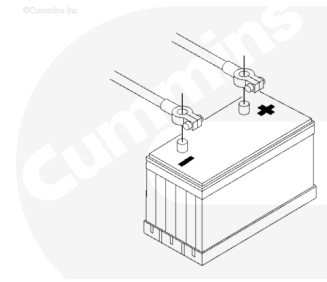

13900050

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for leaks.