


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

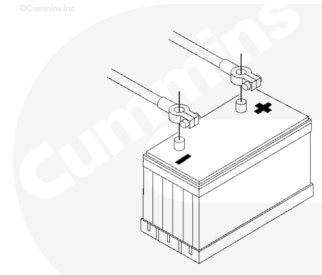


13900050

Remove

Low Pressure Fuel Line(s)


Low-Pressure Fuel Line Replacement - Distributor-Type Pumps

Remove the line from the fuel transfer pump and fuel filter head.

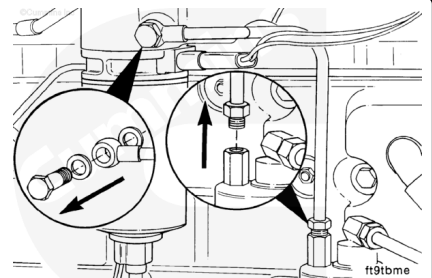


Bosch® In-Line Fuel Injection Pump Fuel Line


Remove the fuel line from the piston-style fuel transfer pump.

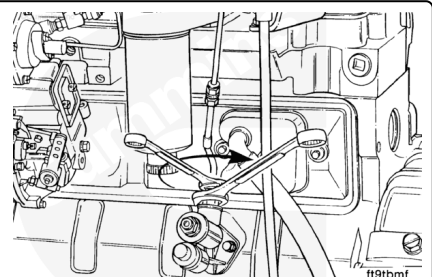

Remove the fuel drain manifold line at the filter head.

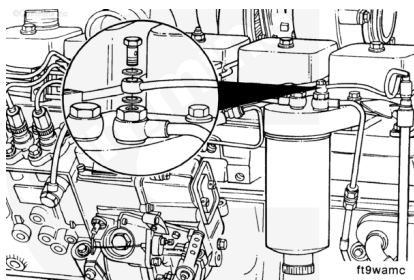


Remove the fuel line from the filter head.

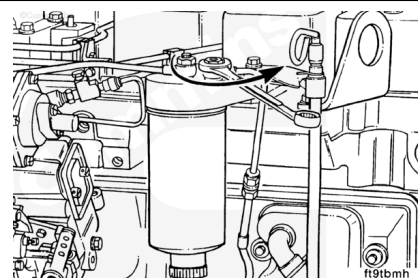


Fuel Injection Pump Supply Line - Distributor-Type Pumps

Remove the bleed screw banjo fitting, and complete the following steps:

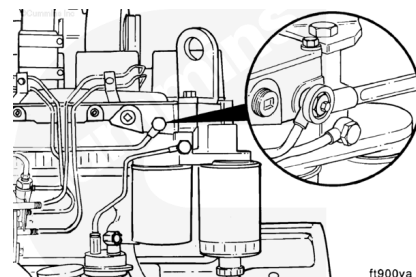


Remove the fuel line from the Bosch® fuel injection pump fitting.

Note : To prevent loosening the fuel injection pump inlet fitting, use two wrenches when removing the fuel supply line.

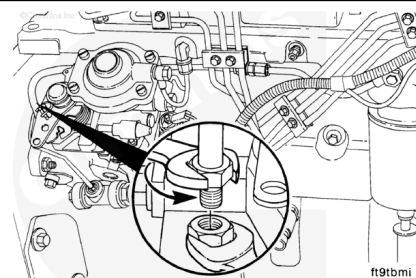


Remove the fuel supply line from the two Lucas CAV fuel injection pump fittings.

Note : Replace the seals in the fittings if the line is disassembled.

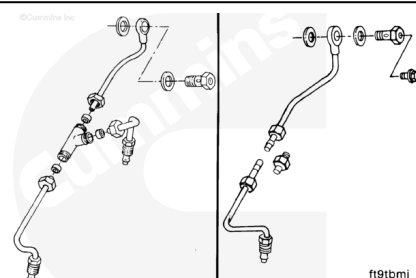


Pump Supply Line - Bosch® In-Line Pump

Remove the banjo capscrew and sealing washers at the filter head.

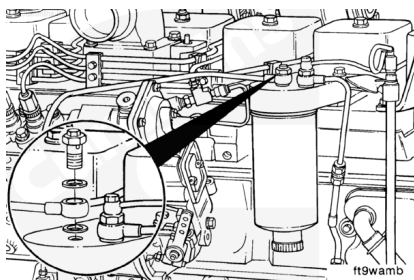


Remove the banjo capscrew and copper sealing washer at the fuel injection pump inlet.

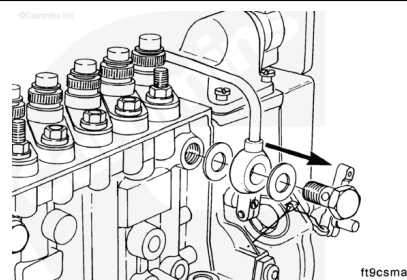

Install

Low Pressure Fuel Line(s)

Note : When replacing the fuel lines, replace the banjo fitting sealing washers (1) each time they are removed.

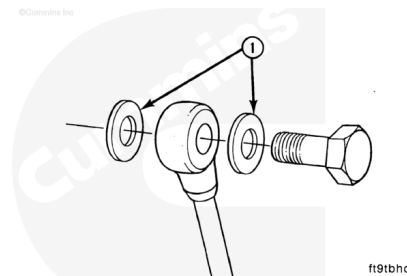


Fuel Pump Supply Line - Bosch® In-Line Pump.

Install the banjo capscrew and copper sealing washer at the fuel injection pump inlet.

Note : When replacing the fuel lines, replace the banjo fitting sealing washers each time they are removed.


Install the fuel line and tighten.

Torque Value: 32 n•m [24 ft-lb]

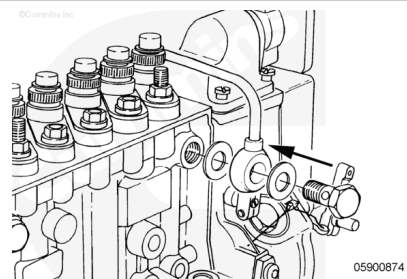


Install the banjo capscrew and sealing washers at the filter head.

Torque Value: 24 n•m [18 ft-lb]

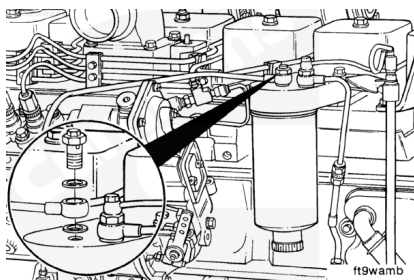

Install the fuel supply line to the two Lucas CAV fuel injection pumps.


Torque Value: 24 n•m [18 ft-lb]

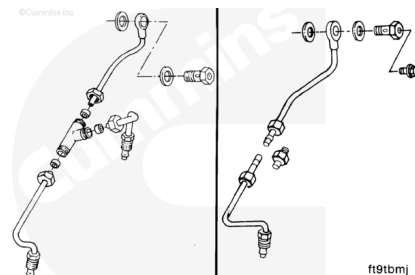

Install the fuel line to the Bosch® fuel injection pump fitting.

Note : To prevent overtightening the fuel injection pump inlet fitting, use two wrenches when installing the fuel supply line.


Torque Value: 32 n•m [24 ft-lb]

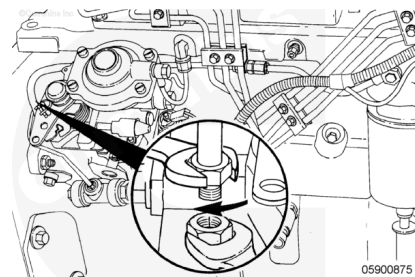

Fuel Injection Pump Supply Line - Distributor-Type Pumps.


Install the bleed screw banjo fitting.

Torque Value: 24 n•m [18 ft-lb]

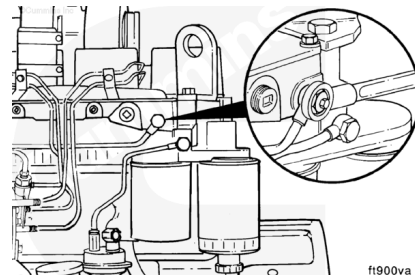


Install the fuel line to the filter head.

Torque Value: 24 n•m [18 ft-lb]

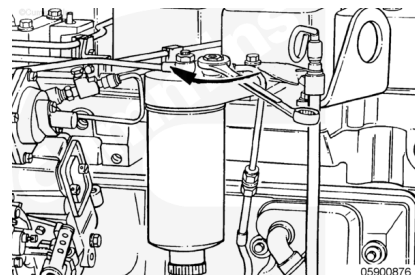

Install the fuel drain manifold line at the filter head.

Torque Value: 13 n•m [10 ft-lb]

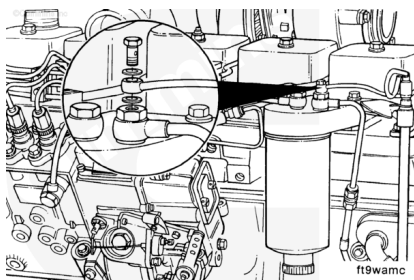


Bosch® In-Line Fuel Injection Pump Fuel Line.

Install the fuel line to the piston-style fuel transfer pump.

Torque Value: 24 n•m [18 ft-lb]


Note : To prevent overtightening the fuel injection pump inlet fitting, use two wrenches when installing the fuel supply line.

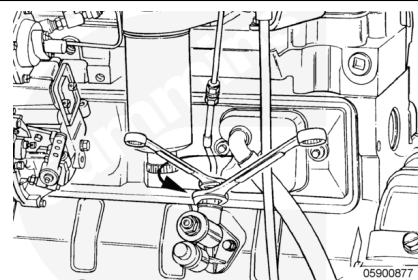

Low-Pressure Fuel Line Replacment - Distributor-Type Pumps.

Install the line from the fuel transfer pump and fuel filter head.

Torque Value: 24 n•m [18 ft-lb]

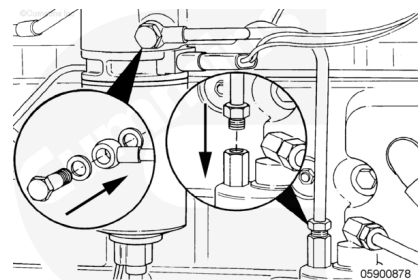


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

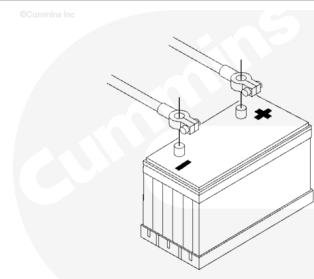

13900050

