

Trainings ▾


Remove

Front Gear Train

Rust-Penetrating Solvent

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

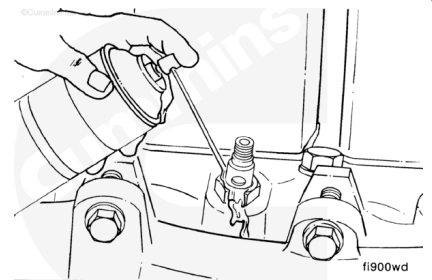

⚠ WARNING ⚠


Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ CAUTION ⚠


When rust has formed on the hold-down nut, the injector can turn in the bore when the nut is loosened. This can cause severe damage to the head by the injector locating ball cutting a groove in the bore.

Soak the hold-down nut with a rust-penetrating solvent for a minimum of 3 minutes.


Hit the injector body with a drift pin to loosen any rust.

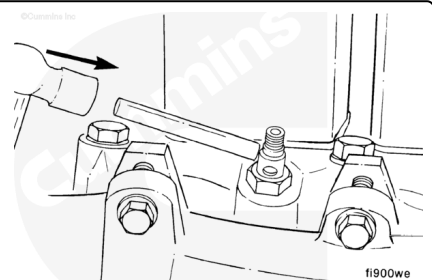


Hold the injector body with an adjustable wrench while loosening the hold-down nut with a 24-mm box wrench.

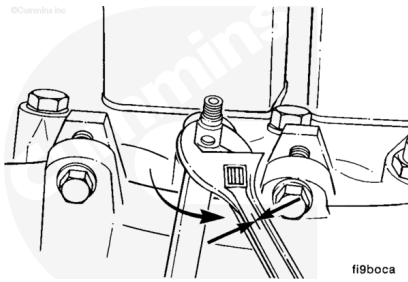

Use an injector puller, Part Number 3823276, to remove the injectors.

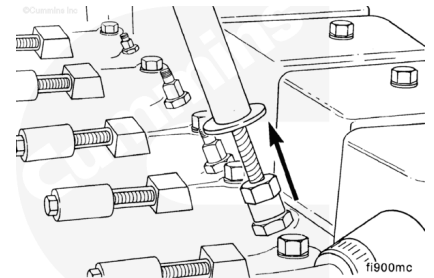


It is often necessary to tap the injector with the injector puller to work the injector up and down to remove it.

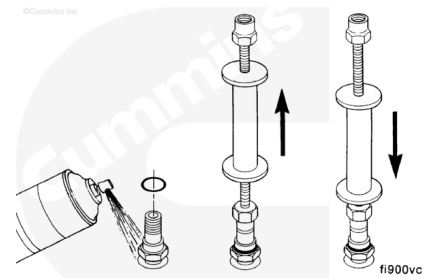

Rear Gear Train

Remove the injector hold-down capscrews.
Tilt the hold-downs up, and slide them out.

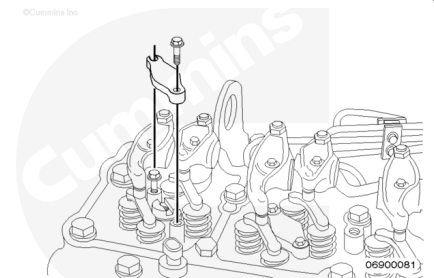

Use an injector puller, Part Number 3825156, to remove the injectors from the head.

