


Trainings ▾

Initial Check

⚠ CAUTION ⚠

A sticky check ball or spring will result in engine low power.


Use a small screwdriver to make sure that the check ball is **not** sticking in the high-pressure relief valve assembly.

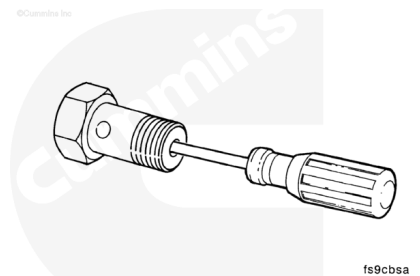

Remove

Bosch® In-Line Pump: Remove pressure relief valve and washer.

Remove the pressure relief valve and sealing washer.

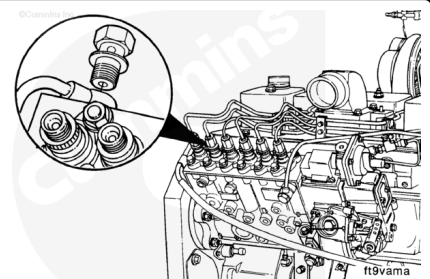

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Thoroughly flush the high-pressure relief valve with cleaning solution.



Install

⚠ CAUTION ⚠

Do not use the center cap as a vent. This will cause damage to the overflow valve.

Install the high-pressure relief valve assembly in the reverse order of removal.

