

Trainings ▾

Install

B4.5 RGT Engines

A new fuel connector **must** be used when replacing the injector.


Lubricate the fuel connector o-ring and the threads on the fuel connector retaining nut.

Carefully insert the fuel connector, aligning the guide ball with the slot in the cylinder head at the 12-o'clock position.

Note : Use even axial force when installing to prevent the possibility of damage. Make sure **not** to tear the o-ring as the connector is being installed.

Note : If the injector was removed along with the high-pressure connector, the installation steps outlined in Procedure 006-026 (</qs3/pubsys2/xml/en/procedures/40/40-006-026-tr.html>) **must** be followed.

Tighten the fuel connector retaining nut.

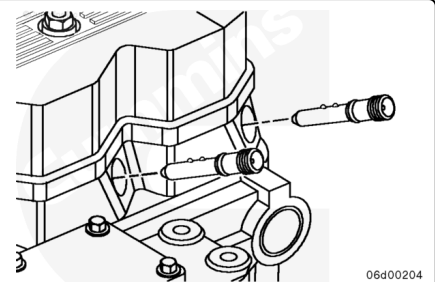

Fuel Connector (cylinder head- mounted)	50 n.m	[37 ft-lb]
---	--------	------------