


Trainings ▾

General Information

The lubricating oil cooler is mounted between the lubricating oil cooler cover and the cylinder block. Since neither the lubricating oil cooler or lubricating oil cooler cover can be removed without removing and installing the other, this procedure covers the removal and installation of both components.

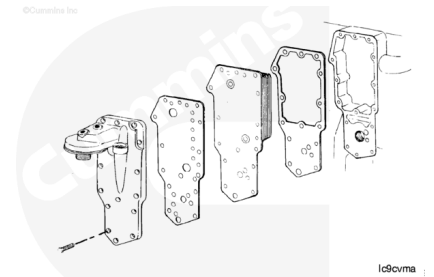

Remove

Remove the lubricating oil cooler housing capscrews, housing, gaskets, and cooler element.

