

## Trainings ▾


### General Information

Due to the number of dipstick tube options, the following procedure has been generalized to cover common dipstick tube procedures. The illustrations may **not** match the engine being serviced.

©Cummins Inc.

### Remove


If equipped with a locking dipstick, twist the handle counter-clockwise to unlock. Pull up to remove.

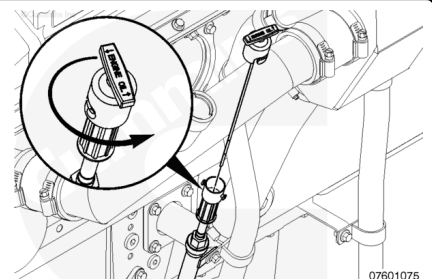

Remove dipstick from the dipstick tube.


If equipped, remove any dipstick tube supports and clamps.

If equipped, remove the flexible portion of the dipstick tube.

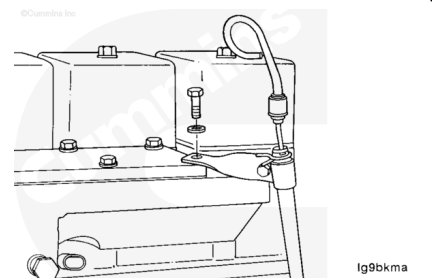

If required, remove the dipstick tube block insert:

1. Use a dent puller and a M8 x 1.25 x 21-mm self-tapping capscrew. Thread the capscrew into the dipstick tube block insert, and remove the tube
2. With the oil pan removed, drive the dipstick tube block insert out with a suitable punch.

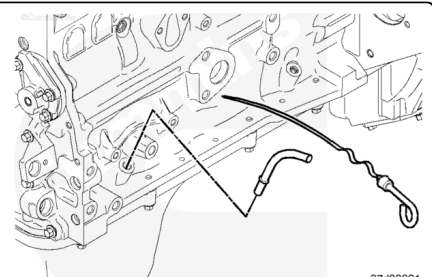

**Last Modified: 05-Apr-2006**