


Trainings ▾

Install

Front Gear Train


If the engine is equipped with a bedplate, install the bedplate first.

Note : The bedplate will **only** install one way. The center ribs are stamped offset to clear the main bearing caps.

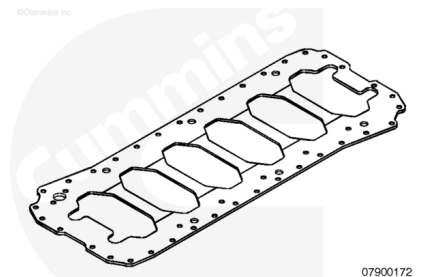


Apply a 1 to 2 mm [0.4 to 0.08 in] bead of RTV, Part Number 3164067, to the block side of the plate.


Note : The bedplate **must** be installed within 5 minutes of applying RTV sealant to obtain the proper seal.

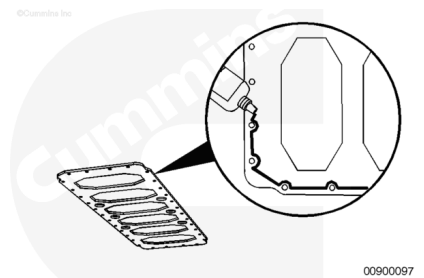


Install the bedplate to the block. Use six oil pan capscrews to hold the bedplate temporarily in place.

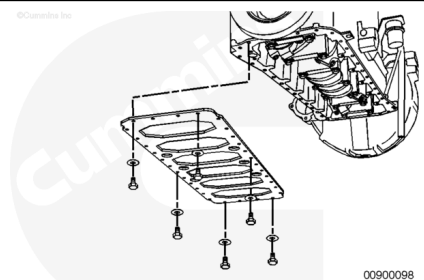

Remove the temporary capscrews.

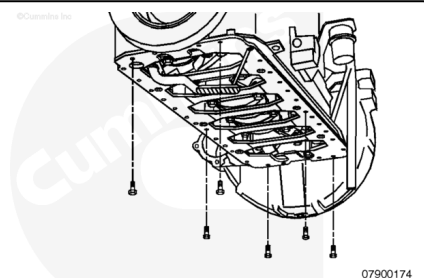


Apply a 2 mm [1/16 in] bead of sealant, Part Number 3164067, to the oil pan mounting surfaces at the cylinder block-to-front gear cover joints, and the cylinder block-to-rear gear housing joints.

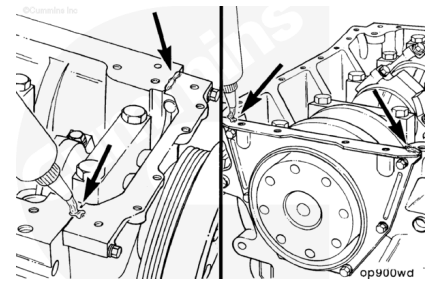


The replacement lubricating oil pan gasket can be in be a four piece segmented lubricating oil pan gasket rather than a single piece lubricating oil pan gasket.

The replacement lubricating oil pan gasket will need to be separated into four pieces and assembled on the lubricating oil pan flange to make a complete lubricating oil pan gasket.

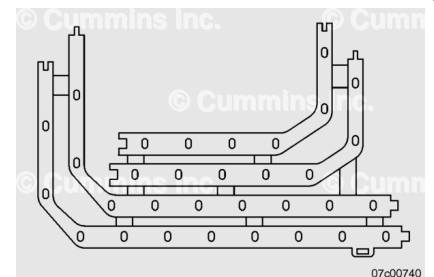

If the suction tube has been removed in order to remove the bedplate, install the suction tube. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html>)

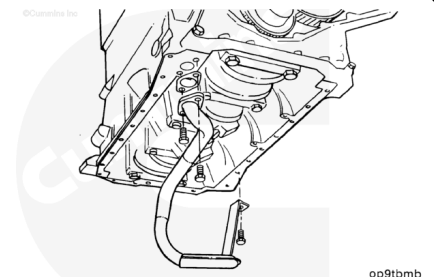

Apply a 2-mm [0.063-in] bead of sealant, Part Number 3164067, to the lubricating oil pan flange.


Lay the lubricating oil pan gasket(s) onto the lubricating oil pan flange.

For segmented lubricating oil pan gaskets, ensure the lubricating oil pan gasket segment joints are properly aligned.

Apply a 2-mm [0.063-in] bead of sealant, Part Number 3164067, to the top of the new lubricating pan gasket.

For segmented lubricating oil pan gaskets, make sure the sealant fills the lubricating oil pan gasket segment joints.

Install the lubricating oil pan and lubricating oil pan mounting capscrews.

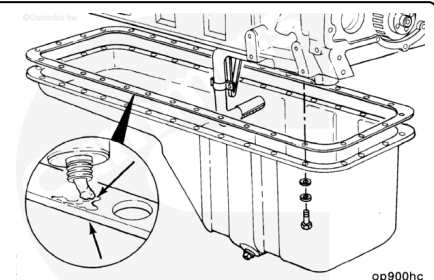


Six-Cylinder

Assemble the washers and capscrews to secure the lubricating oil pan as illustrated.

Tighten all capscrews in the sequence shown in the accompanying chart.

Torque Value: 24 n•m [212 in-lb]

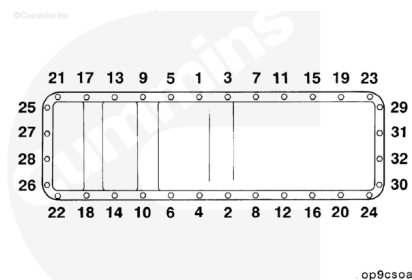


Four-Cylinder

Assemble the washers and capscrews to secure the lubricating oil pan as illustrated.


Tighten all capscrews in the sequence shown in the accompanying chart.

Torque Value: 24 n•m [212 in-lb]

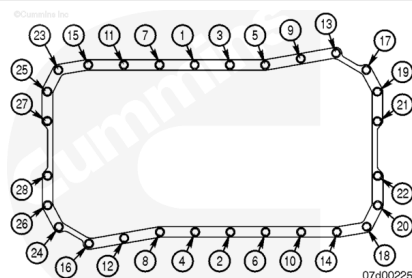


Rear Gear Train

Install the suction tube if has been removed. Refer to Procedure 007-035 in Section 7.
(/qs3/pubsys2/xml/en/procedures/40/40-007-035-tr.html)

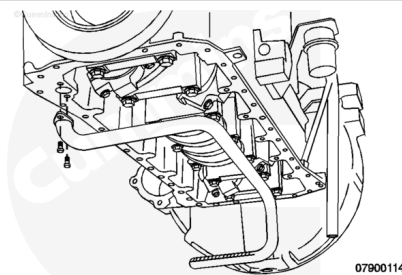


Prior to installing the oil pan, apply RTV sealant, Part Number 3164070, to the joints between the lubricating oil pan rail-rear gear housing, and the lubricating oil pan rail-front gear cover.

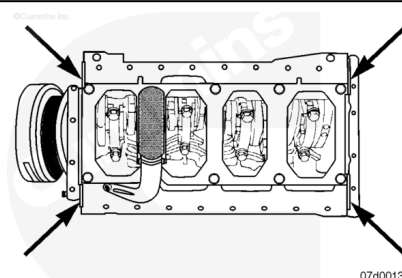

Assemble the new flexible gasket onto the oil pan.

Install the mounting flange over the oil pan/gasket assembly.


Install the oil pan assembly and mounting capscrews.

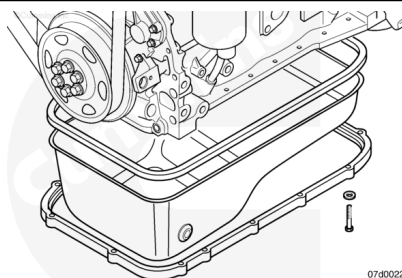

Tighten all capscrews in the sequence shown.

Torque Value:

1. 24 n•m [212 in-lb]

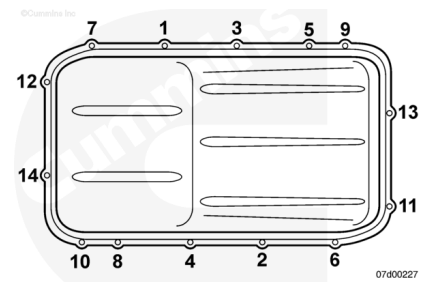

Last Modified: 26-Jan-2016
