


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

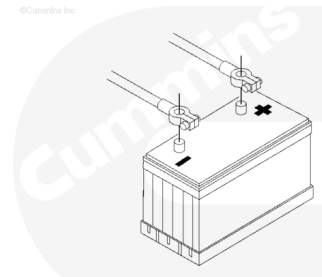

13900050

Thoroughly clean the area around the pressure regulator plug to prevent debris from falling into the plunger bore when the plug is removed.

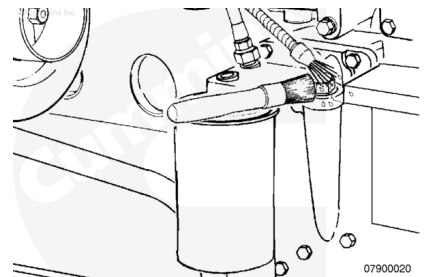


07900020

Remove

Remove the threaded plug, spring, and plunger.

Service Tip: The plunger normally can be removed by inserting one finger into the plunger bore until snug and pulling up. If the plunger can **not** be removed in this manner, the plunger is probably stuck and will require removal of the housing for plunger removal and cleaning.

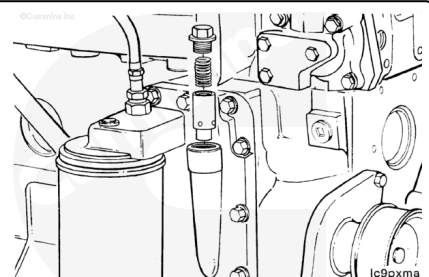


1c9puma

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury. Wear goggles and protective clothing to reduce the possibility of personal injury.

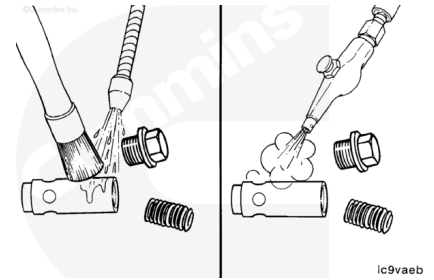

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ CAUTION ⚠


Compressed air used for cleaning should not exceed 207 kPa [30 psi]. Failure to do so can cause engine component damage.

Thoroughly clean all components with clean solvent.


Dry with compressed air.

Note : If the plunger bore requires cleaning, remove the housing so as not to flush debris into the engine.

Inspect the plunger and plunger bore. Polished areas on the plunger and bore are acceptable.

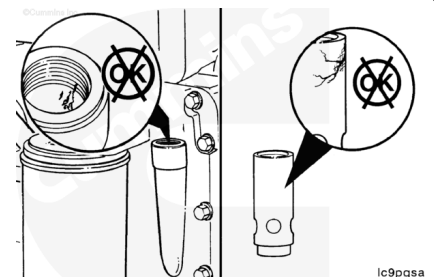


Verify the plunger moves freely in the bore.

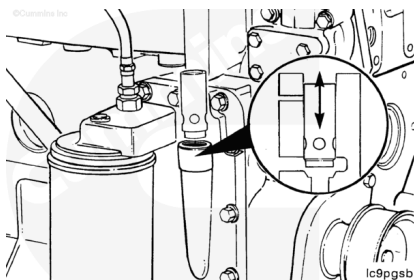

Install

Install a new sealing o-ring on the threaded plug and lubricate with clean lubricating engine oil. Install the pressure regulator assembly.

Torque Value: 80 n•m [59 ft-lb]

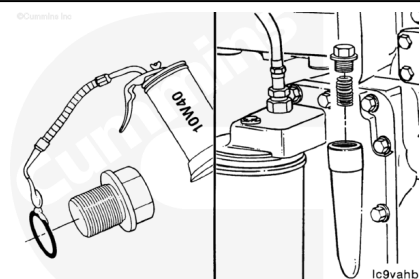

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries.

