


Trainings ▾

Install

⚠ CAUTION ⚠

The suction tube gasket is not symmetrical. Failure to install it properly can result in low oil pressure and engine damage.

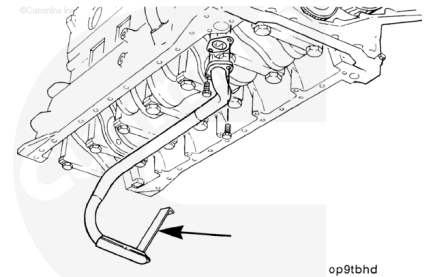

Note : For front gear train engines with a bedplate, the bedplate must be installed before the suction tube is installed. Also for front gear train engines, the bedplate must be installed in sequence with the oil pan. Refer to Procedure 007-025 (</qs3/pubsys2/xml/en/procedures/40/40-007-025-tr.html>).

Install the lubricating oil suction tube gasket and suction tube.

Install and tighten the suction tube mounting capscrews.

Torque Value: 24 n•m [212 in-lb]

Note : Take care to ensure the oil suction tube gasket openings align with both the oil suction tube and the block.