


Trainings ▾

Remove

Disconnect the wire from the sending unit.

Note : The sending units illustrated can be different from those installed by the equipment manufacturer.

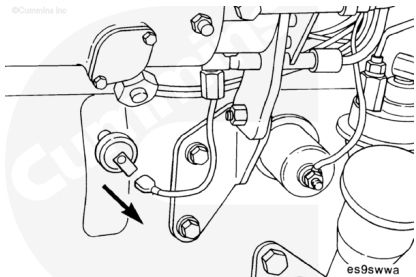

Inspect for Reuse


Remove the lubricating oil pressure switch, install a gauge, start the engine, and measure the lubricating oil pressure.

Minimum lubricating oil pressure:

Low Idle (675 to 725 rpm) 69 kPa [10 psi]

High Idle 207 kPa [30 psi]

Note : The Pressure switch is set to actuate when oil pressure drops to 55 kPa [8 psi].

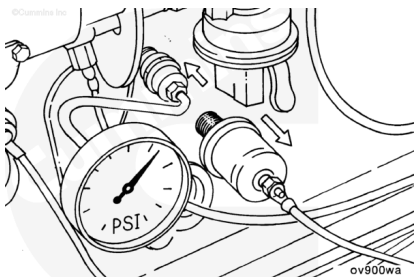

Install

Install the sending unit.

Connect the wire to the sending unit.

(Installed into Cast Iron)	16 n.m	[142 in-lb]
(Installed into Aluminum)	10 n.m	[89 in-lb]

