


General Information

Pressure Caps

The system is designed to use a pressure cap to prevent boiling of the coolant.

Different caps are specified for the two recommended systems:

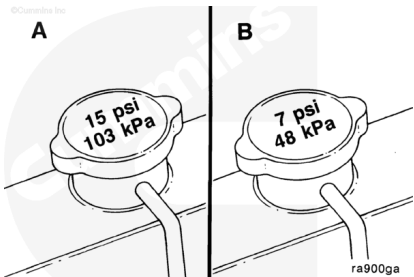


Radiator Cap Pressure Test

	System	Cap
A (Normal-Duty)	104°C [219°F]	103 KPa [15 psi]
B (Light-Duty)	99°C [210°F]	48 KPa [7 psi]


Note : An incorrect or malfunctioning cap can result in the loss of coolant and the engine running hot.

An incorrect or malfunctioning cap can result in loss of coolant and the engine running hot.

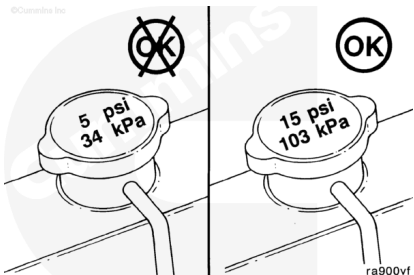

Air in the coolant can result in loss of coolant from the overflow when the aerated coolant is hot. The heated air expands, increasing the pressure in the system, causing the cap to open.


Similarly, coolant can be displaced through the overflow if the head gasket leaks compression gases to the coolant system.

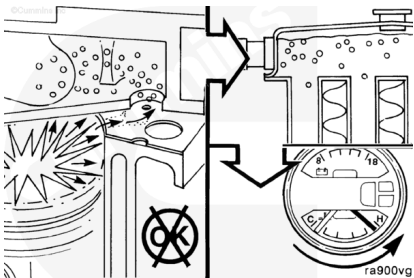

The operating pressure of the coolant system and the lubricating system can result in the mixing of the fluids if there is a leak between the systems, such as the head gasket or oil

cooler (refer to Procedure 007-037 (/qs3/pubsys2/xml/en/procedures/40/40-007-037.html) Lubricating Oil System in Section 7).

Note : Transmission fluid can also leak into the coolant through radiator bottom tank transmission oil coolers. Refer to the OEM service manual.

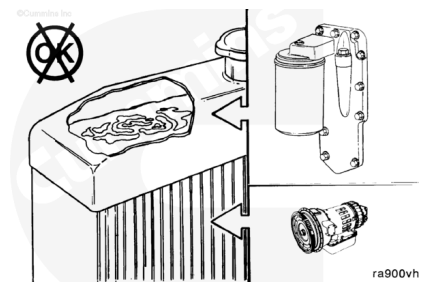


Inspect for Reuse

Be sure the correct radiator cap is being used. Refer to (Cooling System) in Section V - Specifications.

Inspect the rubber seal of the pressure cap for damage.

Inspect the radiator fill neck for cracks or other damage.

Refer to the radiator manufacturer for instructions if the fill neck is damaged.

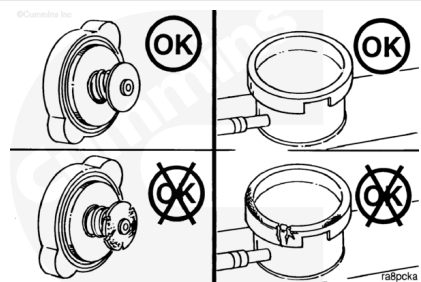


Pressure Test

The system is designed to use the pressure cap to prevent boiling of the coolant.

Different caps are specified for the two recommended systems:


System	Cap
A-Normal-Duty 104°C [219°F]	103 kPa [15 psi]
B-Light-Duty 99°C [210°F]	48 kPa [7 psi]

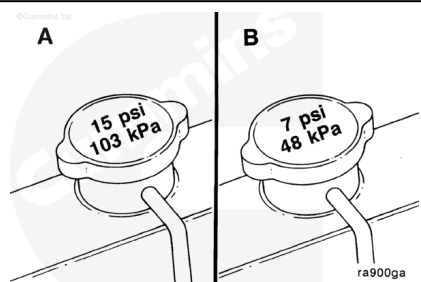

Pressure-test the radiator cap.

The pressure cap **must** seal within the value stated on the cap, or it **must** be replaced.

Note : An incorrect or malfunctioning cap can result in loss of coolant and the engine running hot.

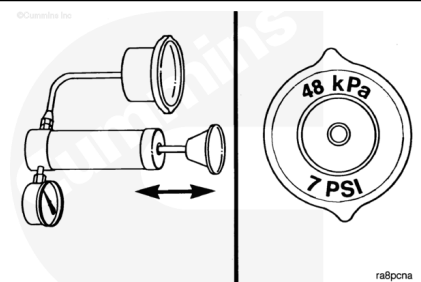

Last Modified: 31-Mar-2006
