

Trainings ▾

Initial Check

Inspect the water pump housing for cracks and/or damage.

Check the water pump seal weep hole. The water pump seal design requires a coolant film for lubrication and cooling. Therefore, it is normal to observe a minor chemical buildup or streaking at the weep hole.


Use the following guidelines to determine if water pump replacement is necessary:

Note : A streak or chemical buildup at the weep hole is not justification for water pump replacement.

Make sure the weep hole is open.

Note : A small screwdriver or a similar tool can be used to remove any debris.

If no leakage is observed from the weep hole under operating conditions, do **not** replace the water pump.

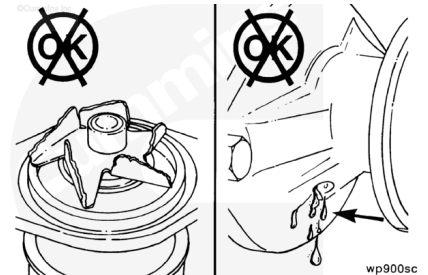

Remove

Remove the two mounting capscrews, water pump, and seal.

