


Trainings ▾

Initial Check

Inspect the line for oil leaks or damage. Replace as necessary.

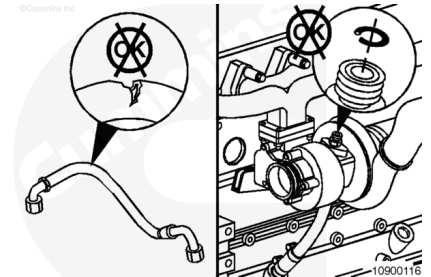


Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

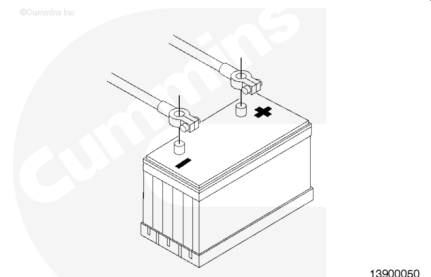

Remove

Remove the oil supply line from the oil filter head.


Remove the oil supply line from the turbocharger bearing housing.

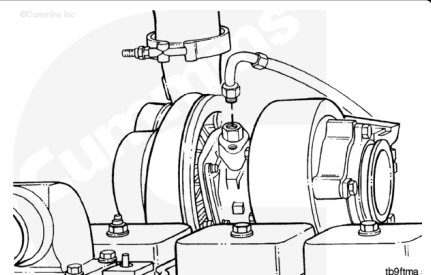

Inspect for Reuse

Inspect the line for cracks, wear, and damage.


Inspect o-rings for cracking and fretting. Replace as necessary.

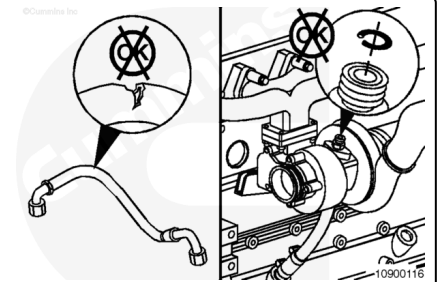

Install

⚠ CAUTION ⚠

Maintain a minimum distance of 10 mm [0.39 in] between the oil supply line and the turbine housing or exhaust manifold, and 5 mm [0.20 in] between the oil supply line and other components to prevent oil line high temperature damage and chafing.

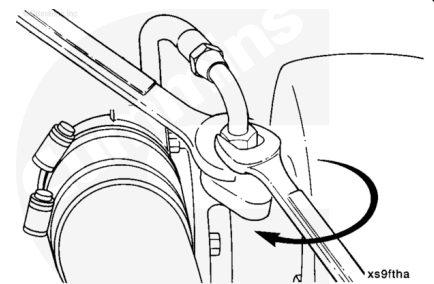

Apply a thin film of oil to the o-ring seals.

Fill the turbocharger oil inlet with clean oil.

Install the oil supply line at both the filter head and the turbocharger bearing housing.

Tighten the oil supply line to final torque.

Torque Value: 24 n·m [212 in-lb]


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing,

remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

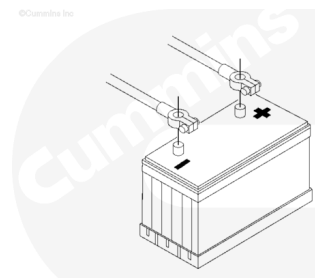

13900050

Last Modified: 05-Aug-2008
