


Trainings ▾

Remove


Brick Type

Remove the four capscrews that attach the air-crossover connection and heater.

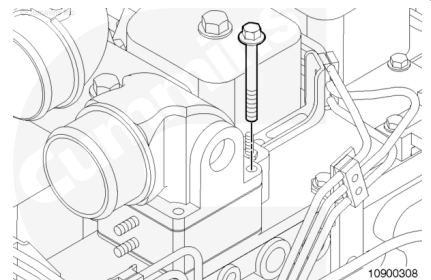

Remove the heater and gaskets.

Clean the mounting surface.

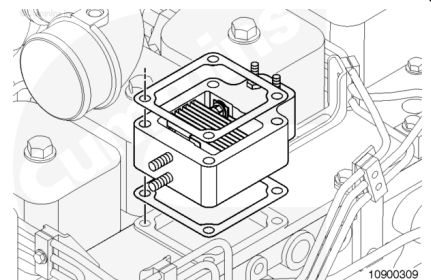

Cylindrical Type

Remove the electrical supply terminal (3), isolater/spacer (4) and washer (1).

Remove the retaining capscrew (2) from the air intake manifold.

Remove the cylindrical air intake manifold heater element assembly from the air intake manifold.

