


Trainings ▾

Remove

Remove the oil supply line.

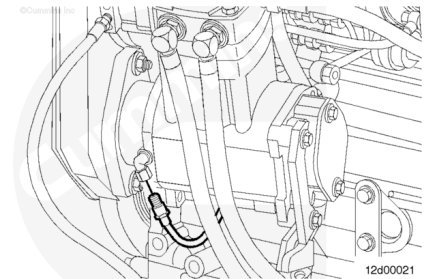

Remove the air compressor support bracket and capscrews.

Remove the air compressor mounting capscrews and the air compressor.

