


Trainings ▾


Initial Check

Check the drive belt and alternator pulley to be sure the alternator is rotating.

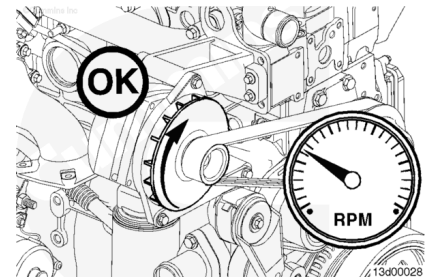

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

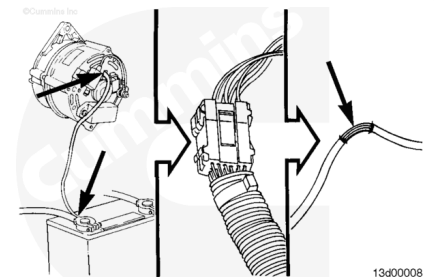


Check the battery and all wiring connections.

Inspect the wiring for defects. Check all connections for tightness and cleanliness, including the slip connectors at the alternator and engine compartment bulkhead, and connections at the battery.

Test

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

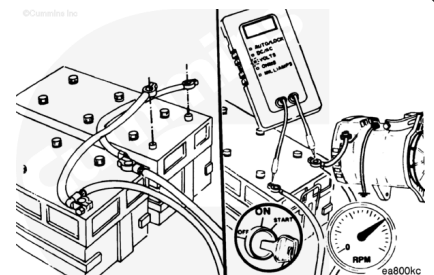

⚠ WARNING ⚠


Acid is extremely dangerous and can damage the machinery and can also cause serious burns. Always provide a tank of strong soda water as a neutralizing agent when servicing the batteries. Wear goggles and protective clothing to reduce the possibility of serious bodily injury.

Disconnect any cables that lead to any other battery boxes in the circuit, negative (-) cables first.

Operate the engine at high idle, and measure the alternator voltage output to the batteries with digital multimeter, Part Number 3377161. Refer to the alternator manufacturer's specifications.

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

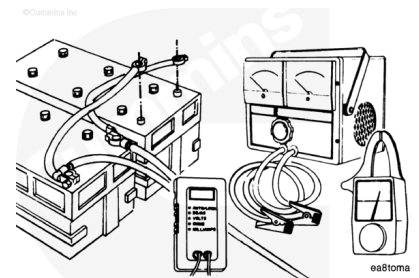

⚠ WARNING ⚠

Acid is extremely dangerous and can damage the machinery and can also cause serious burns. Always provide a tank of strong soda water as a neutralizing agent when servicing the batteries. Wear goggles and protective clothing to reduce the possibility of serious bodily injury.

Shut off the engine and remove the test equipment.

Connect all battery cables, negative (-) cable last.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing,

remove the negative (-) battery cable first and attach the negative (-) battery cable last.

Disconnect the ground cable from the battery terminal.


Remove the drive belt from the alternator pulley.




Remove

Remove and tag all wires.

Complete the following steps.

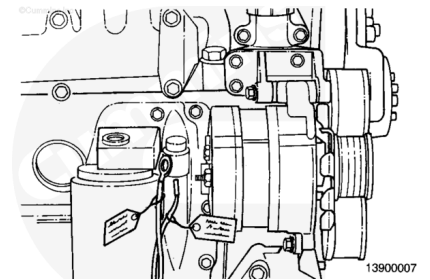


Remove the alternator link capscrew.

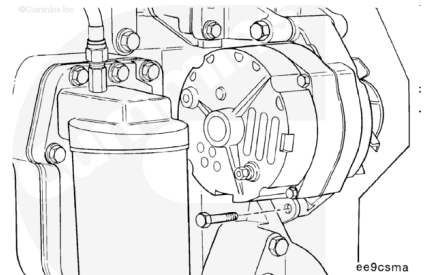

Remove the alternator mounting capscrew.

Remove the alternator.

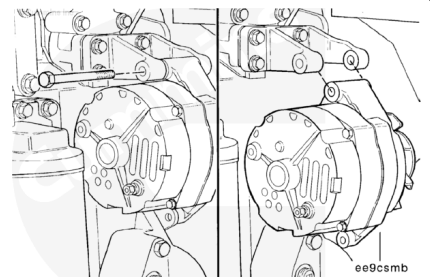

Install

Note : Wrench size and torque value are determined by the make and model of alternator. Refer to the Engine

Component Torque Values.

To assemble the alternator, the alternator mounting components **must** be tightened in the following sequence:

1. Alternator-to-alternator bracket capscrew
2. Lower brace-to-alternator capscrew
3. Lower alternator brace-to-water pump capscrew
4. Water inlet-to-block capscrews.

