

Trainings ▾


Remove

Spool Mount.

Remove the upper alternator link capscrew.


Remove the mounting capscrew and nut at the bottom of the alternator and alternator mounting bracket.

Remove the alternator.

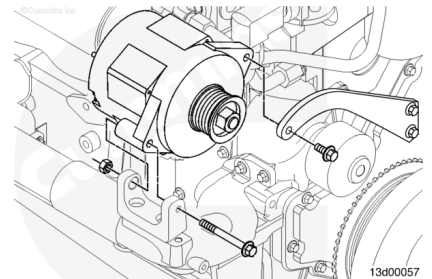

Hinge Mount

Remove the alternator link capscrew.

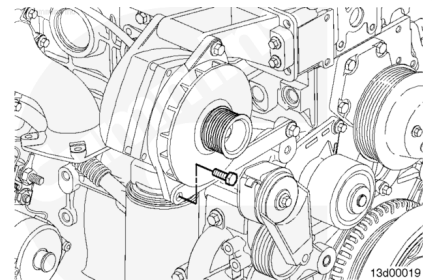

Remove the alternator mounting capscrew.

Remove the alternator.

