


Trainings ▾

Remove

Spool Mount:

Remove the upper alternator bracket mounting capscrews.


Remove the alternator bracket.

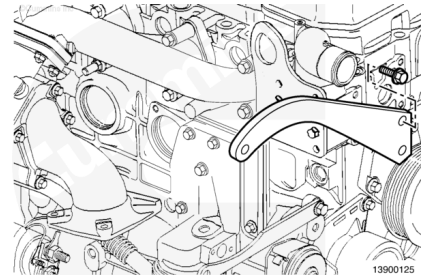

Note : On some applications, the alternator bracket and water inlet are combined in the same bracket. Refer to [Procedure 008-082 \(/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html\)](/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html), where applicable.

Remove the lower alternator bracket mounting capscrews.

Remove the alternator bracket.

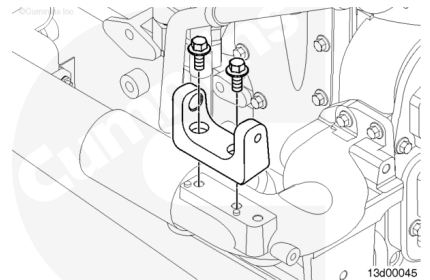

Hinge Mount:

Remove the upper alternator bracket mounting capscrews.

Remove the lower alternator bracket mounting capscrews.

Remove the alternator brackets.

