

Trainings ▾

Maintenance Check


Poly-Vee Belt

⚠ CAUTION ⚠

Make sure that the engine is shut off and any starting mechanisms are isolated before any maintenance is performed.

⚠ CAUTION ⚠

The removal and replacement of any guards covering rotating components, drives and/or belts, must only be accomplished by a trained and certified technician. All fasteners removed must be replaced when installing the guards. If fastener replacement is required, verify the correct part number (or equivalent) is used. Do not substitute a fastener of lesser quality. Possible equipment damage or serious personal injury can occur.

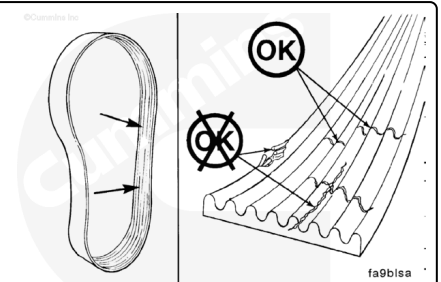

Inspect the belts daily. Check the belt for intersecting cracks. Traverse (across the belt width) cracks are acceptable. Longitudinal (direction of belt length) cracks that intersect with transverse cracks are **not** acceptable. Replace the belt if it is frayed or has pieces of material missing. Use the following procedure for information on belt adjustment and replacement. Refer to Procedure 013-021 in Section A. (</qs3/pubsys2/xml/en/procedures/40/40-013-021.html>)

Belt damage can be caused by:

- Incorrect tension
- Incorrect size or length
- Pulley misalignment
- Incorrect installation
- Severe operating environment
- Oil or grease on the belts.


Cogged Belt

Inspect the belts daily. Replace the belts if they are cracked, frayed, or have chunks of material missing. Small cracks are acceptable.

Adjust any belts that have a glazed or shiny surface, which indicates belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear. Use the following procedure for information on belt adjustment and replacement. Refer to Procedure 013-021 in Section A. (</qs3/pubsys2/xml/en/procedures/40/40-013-021.html>)

Belt damage can be caused by:

- Incorrect tension
- Incorrect size or length
- Pulley misalignment
- Incorrect installation
- Severe operating environment
- Oil or grease on the belts.

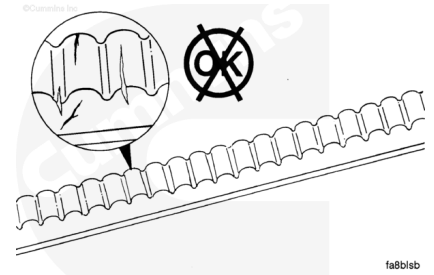


Measure the belt tension in the center span of the pulleys.

Use the following procedure for belt tension specifications. Refer to Procedure 018-005 in Section V. (</qs3/pubsys2/xml/en/procedures/99/99-018-005.html>)

An alternate method (deflection method) can be used to check belt tension by applying 110 N [25 lbf] force between the pulleys on v-belts. If the deflection is more than one belt thickness per foot of pulley center distance, the belt tension **must** be adjusted.

Refer to Section A for adjustment procedures.

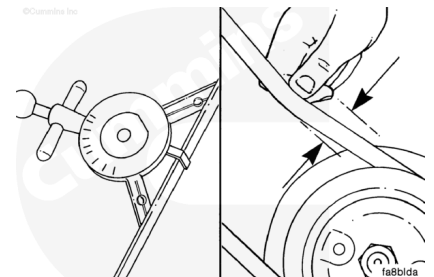

For cogged belts, make sure that the belt tension gauge is positioned so that the center tensioning leg is placed directly over the high point (hump) of a cog. Other positioning will result in incorrect measurement.

