


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

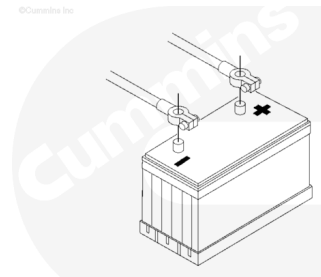

13900050

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

- Remove the transmission and related components. Refer to the OEM service manual.




ck800wa

Initial Check

Inspect the flexplate ring gear teeth for damage.


If the flexplate ring gear is damaged make sure to inspect the following possible causes prior to replacing the flexplate.

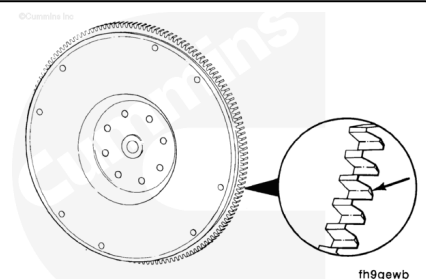

th9gewb

Mechanical


A mechanical issue can typically be identified by seeing damage to the ring gear of the flexplate in 3 distinct locations for 6 cylinder engines (commonly called 120 degree milling), and 2 locations for 4 cylinder engines (commonly called 180 degree milling). The following could be causes for mechanical issues:

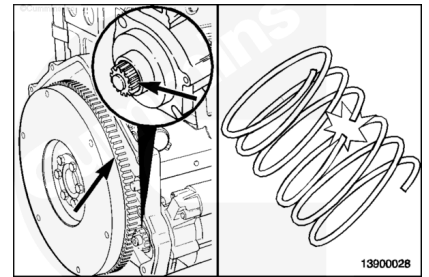

1. Upon installation of the flexplate, make sure to check for proper starter motor spacing. Refer to Procedure 013-020 (</qs3/pubsys2/xml/en/procedures/40/40-013-020-tr.html>)
2. Interference between the ring gear land area and the starting motor pinion. The wrong starting motor may be installed. Refer to the original equipment manufacturer's specifications
3. There may be a defect with the starter motor pinion. Inspect the pinion for nicks and burrs. If replacement of the starting motor is necessary, refer to Procedure 013-020 (</qs3/pubsys2/xml/en/procedures/40/40-013-020-tr.html>)
4. Torque Converter/transmission is damaged/incorrectly mounted. Refer to the original equipment manufacturer's specifications
5. Incorrect starting motor pinion to flexplate ring gear pitch/teeth match. Refer to the original equipment manufacturer's specifications.

Electrical

An electrical issue can typically be identified by seeing damage to the ring gear of the flywheel 360 degrees around the circumference of the ring gear (commonly called 360 degree milling). The following could be causes for electrical issues:

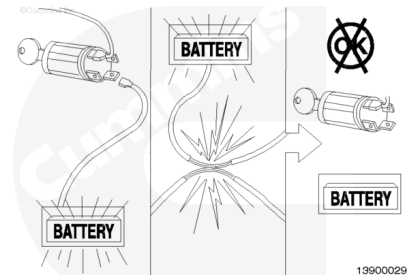


1. Operator is attempting to start engine while engine is already running. Check if a starter lockout feature is available through the OEM or the starting motor manufacturer
2. Key switch causing intermittent starting motor engagement when the engine is running. Inspect the key switch. Refer to the OEM service manual
3. Orientation of the starter relay so that the direction of the pull contact is in the direction of the vehicle's travel. This results in intermittent starter motor engagement when the engine is running. Relocate the starter relay. Refer to the original equipment manufacturer's specifications

4. Intermittent starter motor wiring issues. Refer to the original equipment manufacturer's specifications.

Remove

Remove the flexplate capscrews and flexplate.

Note : Some flexplates require mounting plates and/or adapters. It may be necessary to remove any mounting plates and/or adapters prior to or with the flexplate. Make sure to note the location of any mounting plates and/or adapters for later installation.

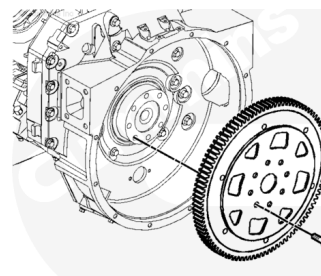


Inspect for Reuse

Inspect the teeth of the ring gear for chips or uneven wear.

Check the flexplate for cracks.

Replace the flexplate if any damage is found.

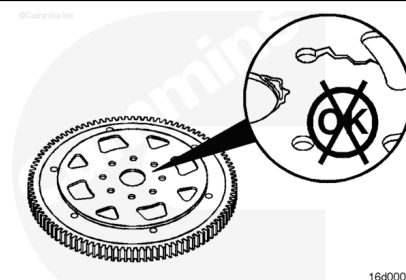


Install

Note : Some flexplates require mounting plates and/or clamp rings. It may be necessary to install any mounting plates and/or clamp rings prior to or with the flexplate as noted during removal.

Install the flexplate capscrews, flexplate, and tighten.

Rear Gear Train Engines Flexplate Capscrews

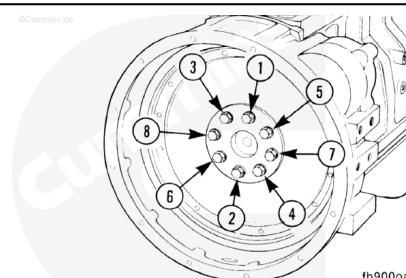

Front Gear Train Engines Flexplate Capscrews	137 n.m	[101 ft-lb]
--	---------	-------------


Finishing Steps

Automotive and Industrial

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries.

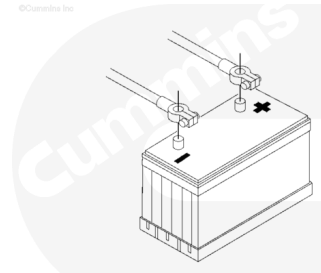

13900050

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

- Install the transmission and related components. Refer to the OEM service manual
- Operate the engine and check for noise or vibration.



ck800wa