


Trainings ▾

Install

Install two M12 x 1.25 x 90-mm guide pins into the crankshaft flange 180 degrees apart.

Note : If a clutch is used in the equipment, the threads in the clutch pressure plate mounting capscrew holes can be metric or standard. Be sure to use the correct capscrews.

Determine the capscrew thread design and size, and install two T-handles into the flywheel (at points 1 and 2).

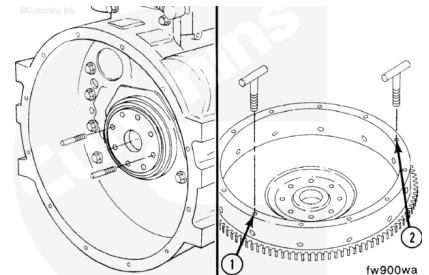


⚠ WARNING ⚠


The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

Inspect the rear face of crankshaft and flywheel mounting flange for cleanliness and raised nicks or burrs.

Install the flywheel on the guide pins.

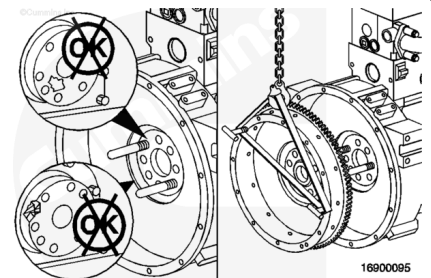


Lubricate the threads of the capscrews and the surface of the washers with clean lubricating engine oil.

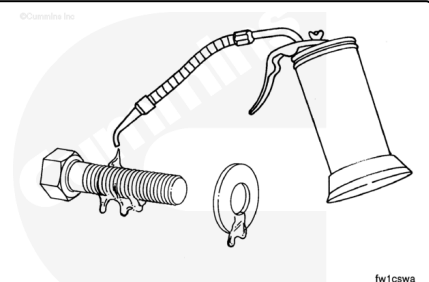

Install the six capscrews.

Remove the T-handles and guide pins.

Install the remaining capscrews into the holes from which the guide pins were removed.

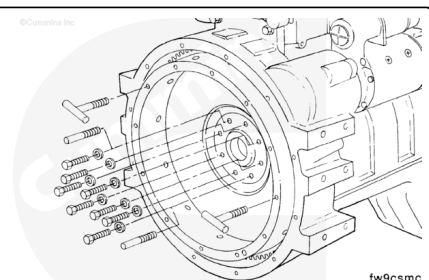

Note : Use the barring tool, Part Number 3824591, to hold the flywheel to prevent rotation.

Tighten the capscrews in a star pattern.

Rear Gear Train Engines Flywheel Capscrews

Front Gear Train Engines Flywheel Capscrews	137 n.m	[101 ft-lb]
---	---------	-------------

