

Trainings ▾

Remove

Note : Use the barring tool, Part Number 3824591, to hold the flywheel to prevent rotation.


Remove two capscrews 180 degrees apart.

Install two M12 x 1.25 x 90-mm guide pins.

Note : If a clutch is used in the equipment, the threads in the clutch pressure plate mounting capscrew holes can be metric or standard. Be sure to use the correct capscrews.

Determine the capscrew thread design and size, and install two T-handles in the flywheel at points (1 and 2).

Remove the remaining six flywheel mounting capscrews.

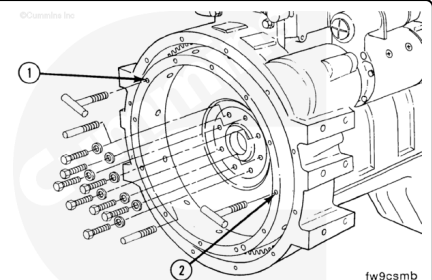

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

Remove the flywheel from the guide pins.

