


Trainings ▾

Remove

Rear Gear Train

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

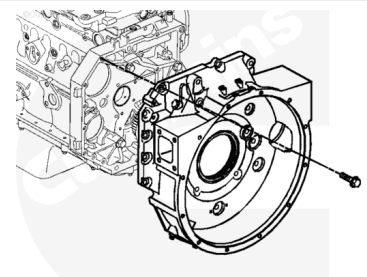

Loosen the flywheel housing capscrews, but do **not** remove.

Using a rubber hammer, loosen the flywheel housing so that the seal is broken between the flywheel housing and rear gear housing.


While supporting the flywheel housing, remove the mounting capscrews and the flywheel housing.

Note the location of the flywheel housing capscrews as removed. Some of the capscrews are different length/size fasteners and **must** be installed in the same location as removed.

Front Gear Train

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

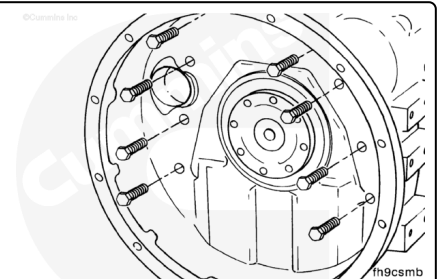


While supporting the flywheel housing, remove the mounting capscrews.

While supporting the flywheel housing, use a rubber hammer to loosen the flywheel housing.

Remove the flywheel housing.

Note : Some engines may have an additional rectangular seal between the flywheel housing and the rear seal carrier

Note : When removing the flywheel housing, note the location of any locating dowel rings.

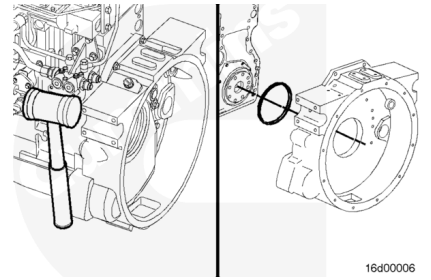

Last Modified: 24-Apr-2006
